Model name

Audi 80 / S2

Audi 100

Audi 100 Avant

Audi 200 / V8

A1/S1

A2

A1 e-tron

A1 / S1 Sportback

Audi 200 Avant

Audi 100 / A6 / S6

Audi 100 / A6 / S6 Avant

Audi 80

Audi 100

Audi 200

Audi 80 / S2 / RS2 Avant

Audi 80 / S2 Coupé

Audi 80 Cabriolet

Model cycle

1990 - 1995

1992 – 1995

1988 – 1996

1991 – 2000

1988 - 1991

1988 - 1991

1991 – 1997

1991 - 1997

1984 - 1991

1985 - 1991

from 2010

from 2011

from 2012

2000 - 2005

Model cycle

1999 - 2003 2003 - 2012 2004 - 2012 2008 - 2013 from 2012 from 2012 from 2013 from 2014 from 2013

Model name

**A3** 

A3 / S3 (3-door)

A3 / S3 (3-door)

A3 / S3 (3-door)

A3 / S3 Sportback

A3 Sportback g-tron

A3 Sportback e-tron

A3/S3 Limousine


A3 / S3 Cabriolet

A3 / S3 / RS3 Sportback

A3 (5-door)

A3 Cabriolet

<i>,</i> , , ,	
A4/S4	1995 – 2001
A4 / S4 / RS4 Avant	1996 – 2001
A4/S4	2001 – 2005
A4 / S4 Avant	2001 – 2005
A4 / S4 / RS4	2005 – 2007
A4 / S4 / RS4 Avant	2005 – 2008
A4 / S4 Cabriolet	2002 – 2005
A4 / S4 / RS4 Cabriolet	2005 – 2009
A4/S4	2007 – 2012
A4 / S4 Avant	2008 – 2012
A4 allroad	2009 – 2012
A4/S4	from 2012
A4 / S4 / RS4 Avant	from 2012
A4 allroad	from 2012

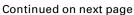



Model name	Model cycle
Q3 Q3 / RS Q3	from 2011
Q5 Q5 / SQ5 Q5 hybrid quattro	from 2008 from 2011
Q <b>7</b>	from 2006
R8 R8 Spyder	from 2007 from 2010
TT  TT Coupé  TT Roadster  TT / TTS / TTRS Coupé  TT / TTS / TTRS Roadster  TT / TTS Coupé	1998 – 2006 1999 – 2006 2006 – 2014 from 2007 from 2014

Legal Disclaimer:

This manual has been created exclusively for rescuers who have been specially trained in the area of providing emergency rescue after automobile accidents and who are therefore qualified to use the activities described in this manual. Furthermore, this manual shows the maximum possible

equipment specification in the model overview.

Vehicle specifications and special options as well as Audi model availability are constantly subject

to change. Therefore, Audi reserves the right to change the content of this manual at all times.

Please note: The information contained in this manual is not intended for customers or for repair shops and dealers. Customers may gather detailed information from their vehicle owner's manual regarding vehicle function as well as any occupant safety features and system descriptions.

Repair shops and dealers obtain repair information through their normal channels.

(Status: 07/2014)


Hint:

The maximum possible equipment specification is always shown In the model overview.


You will find "Rescue and Recovery involving Audi Vehicles" in a separate part of the same title.

The creation of this Rescue Data sheets is supported by Moditech Rescue Solutions (www.moditech.com). The vehicle overviews in the attachment are also included in interactive form in the data base "Crash Recovery System".



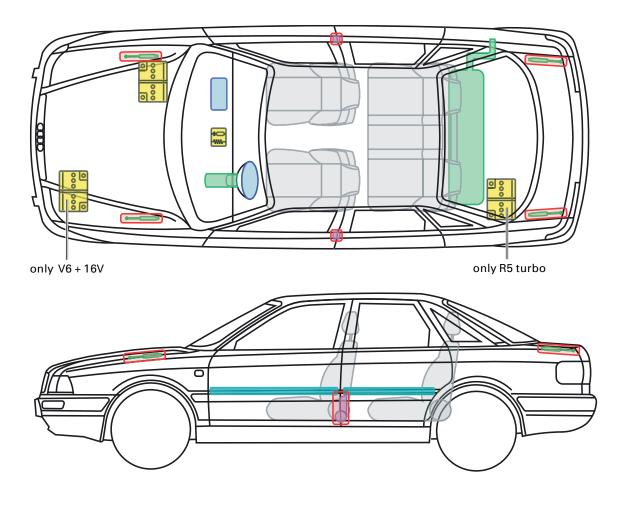


# Legend

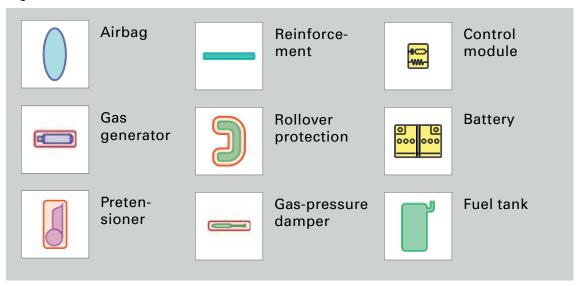







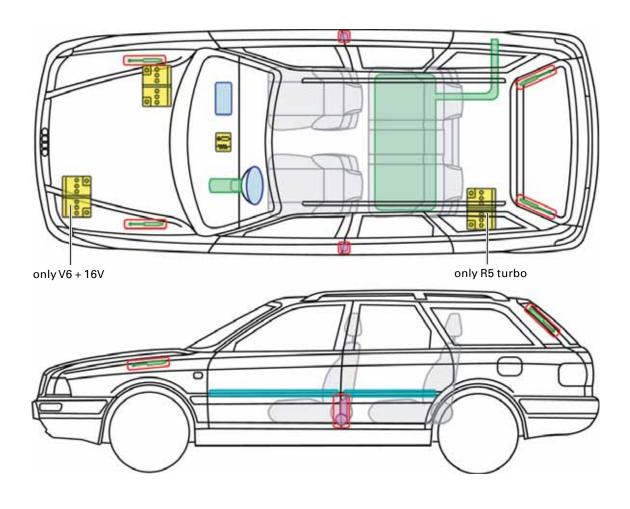


# Legend

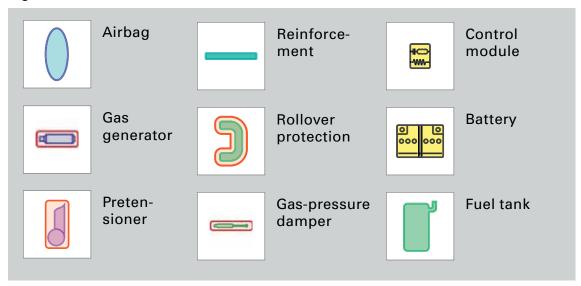



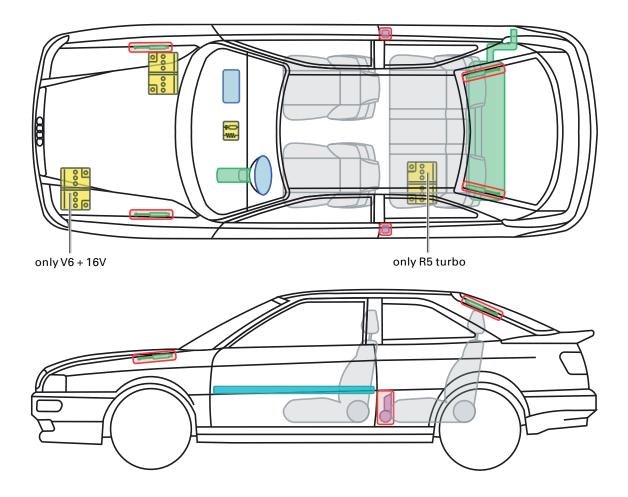


# Legend

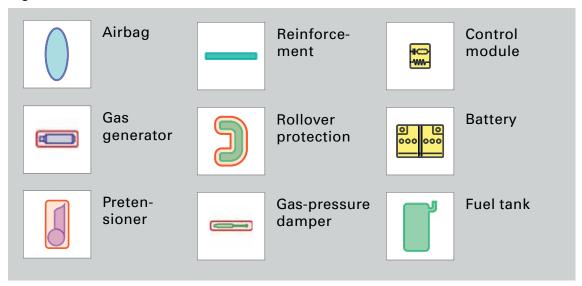






1991 – 2000

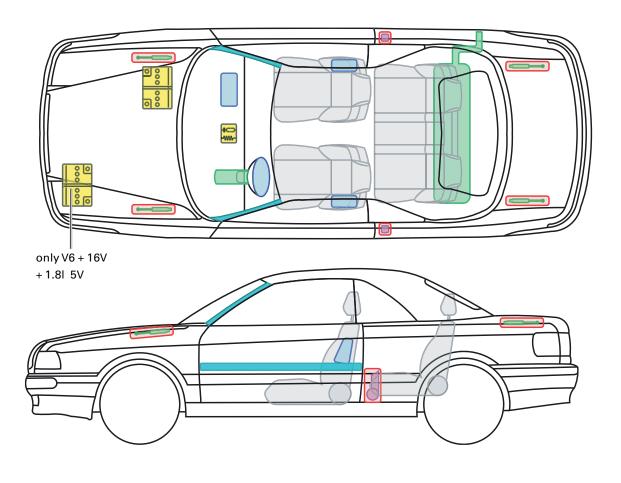


# Legend

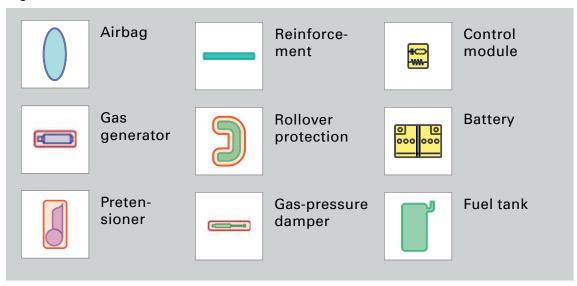






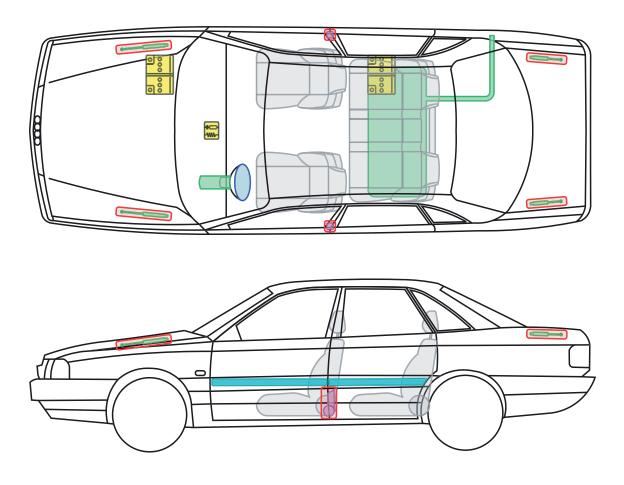


# Legend

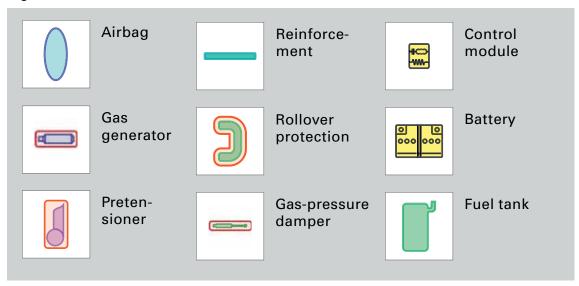






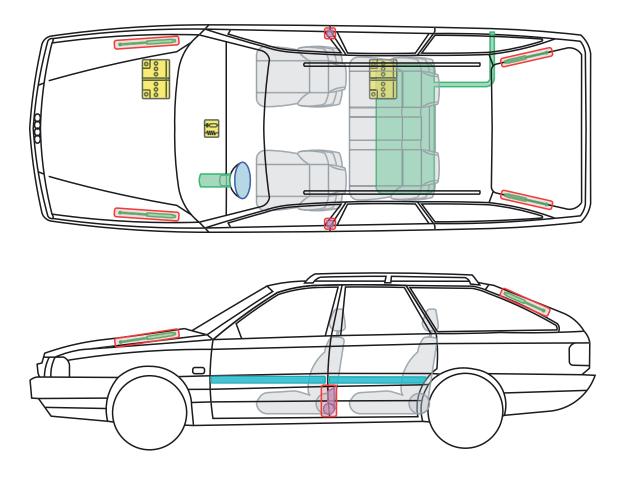


# Legend

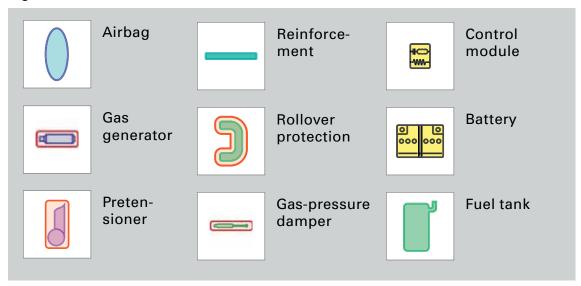






1991 – 1997

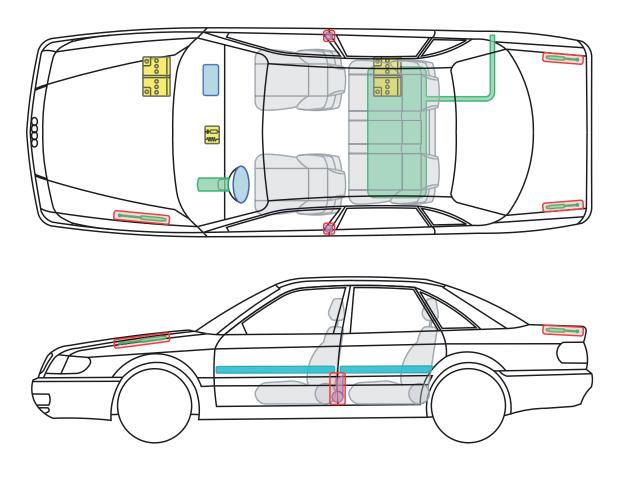

# Legend

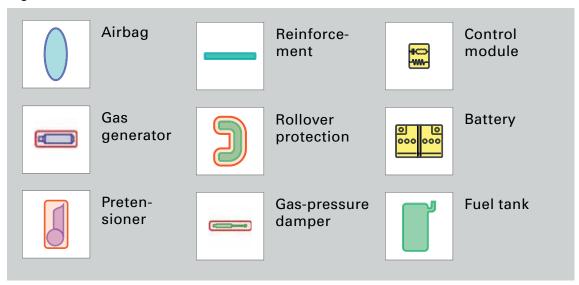







# Audi 100 / A6 / S6 Avant

1991 - 1997

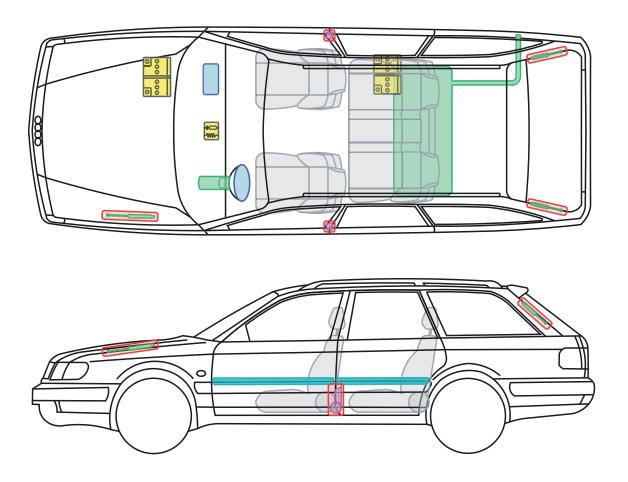


# Legend

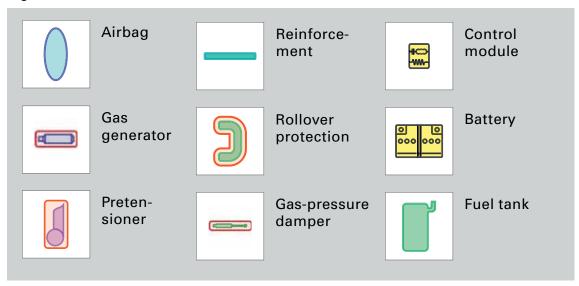






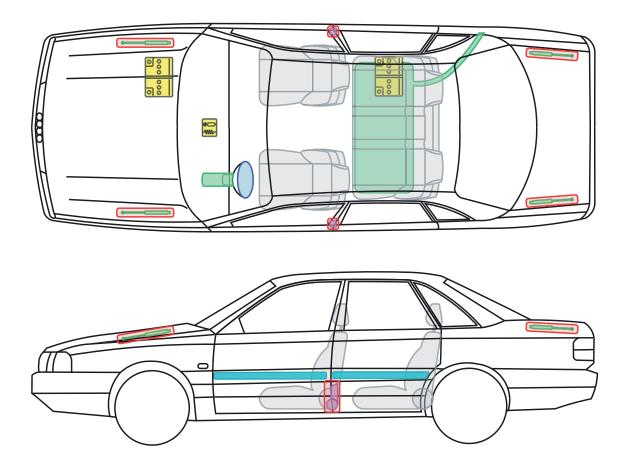

# Legend

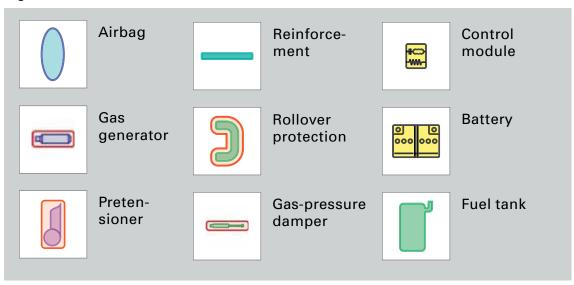







# Audi 200 Avant

1985 - 1991

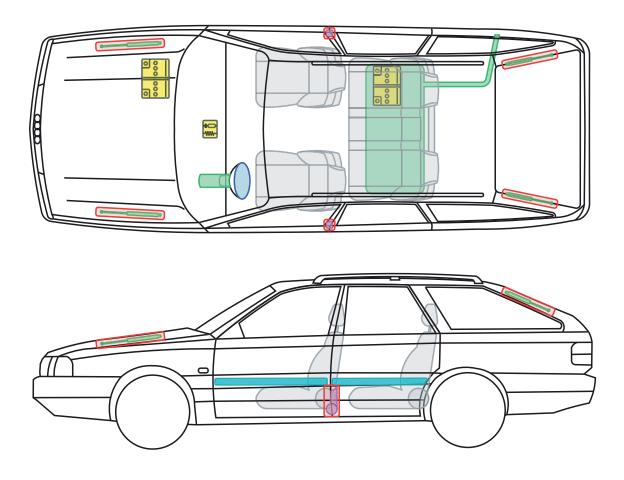


# Legend

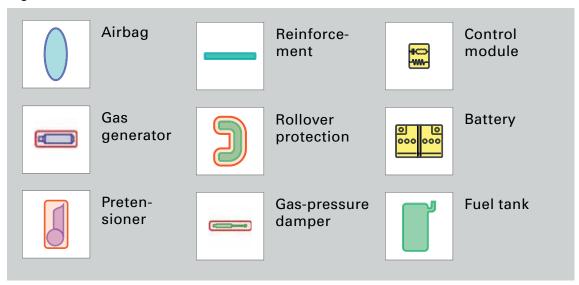






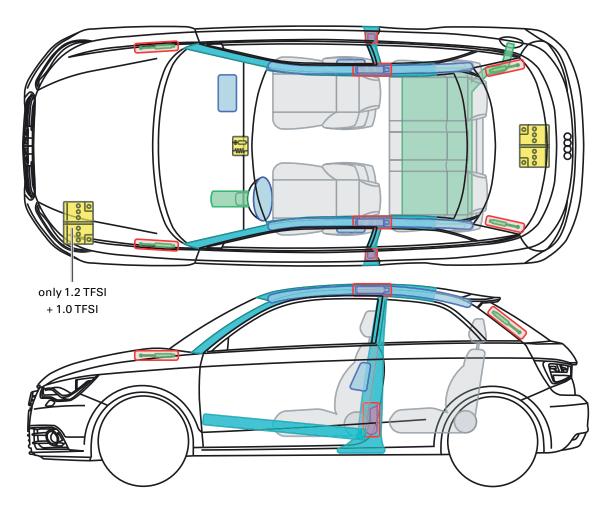


# Legend

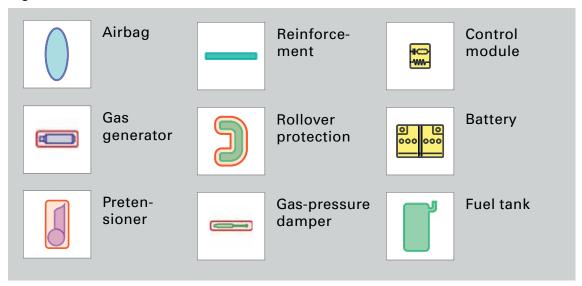






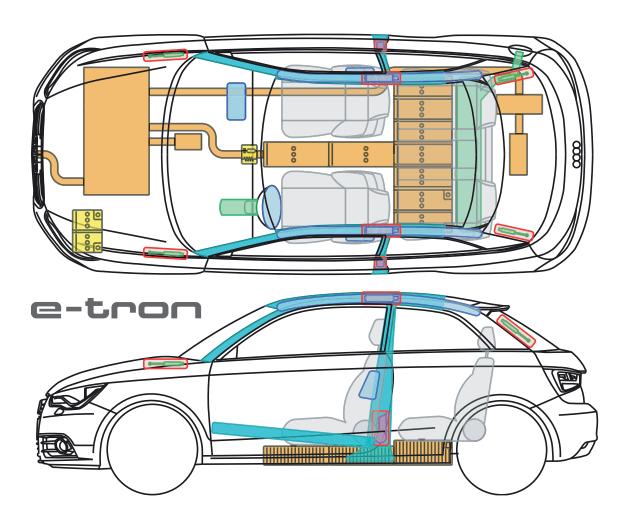

# Legend

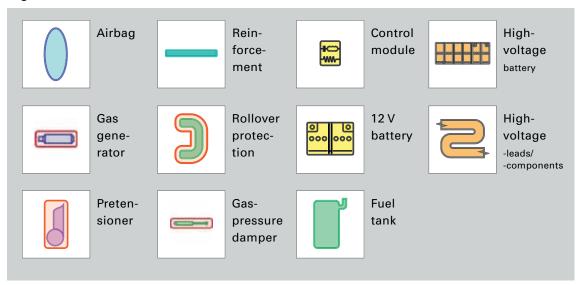





#### Identifying feature

The Audi A1 e-tron can be identified by means of the "e-tron" logo on the instrument cluster or on the wing.



#### Hints



In the case of accidents in which the airbags are deployed, the high-voltage system is deactivated. If the vehicle is connected to the charging point/socket, the charging cable is to be disconnected.

In the case of accidents with deployed/undeployed airbags

- ► Place Vehicle in Park and set parking brake
- Switch off the ignition
- Disconnect the negative terminal of the 12V battery



#### The electric motor is silent!



It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on "OFF" (for example on the "READY" position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

#### Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the The high-voltage battery is located underneath the vehicle, below the transmission tunnel and the rear seat.

It is a lithium-ion battery.

Identification of the remaining high-voltage components







All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.





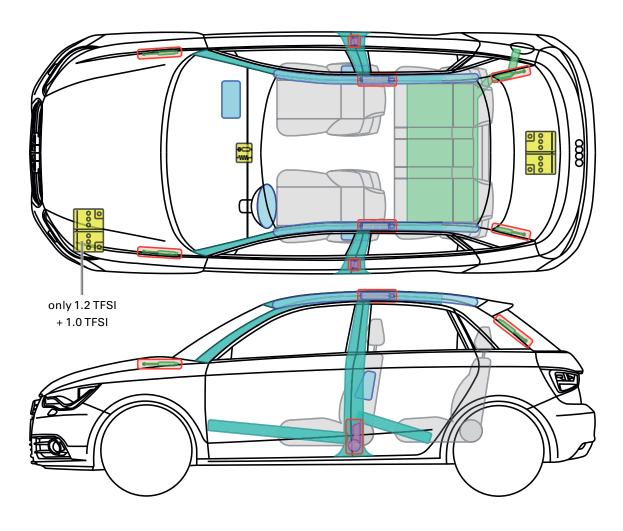


# Legend

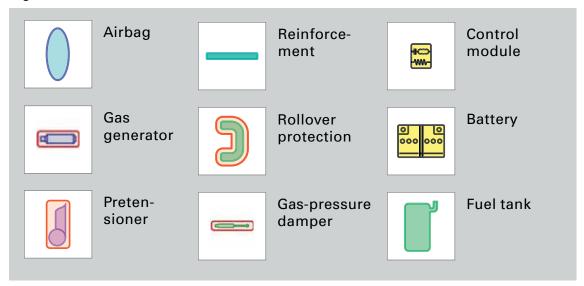






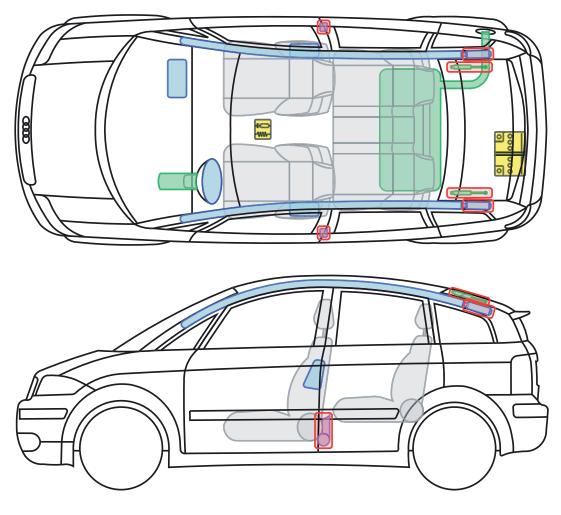



# Legend

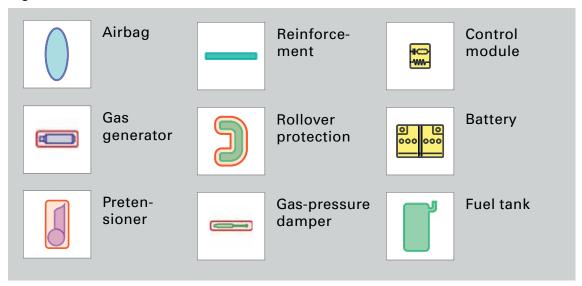






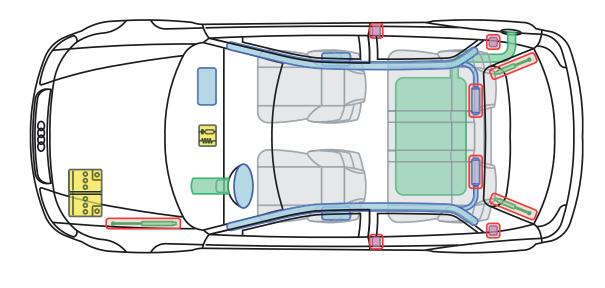

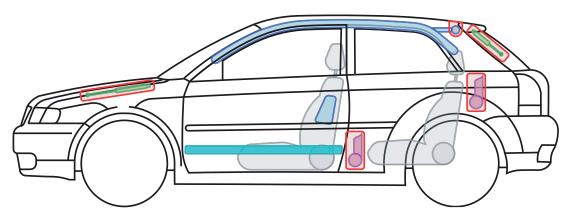


# Legend

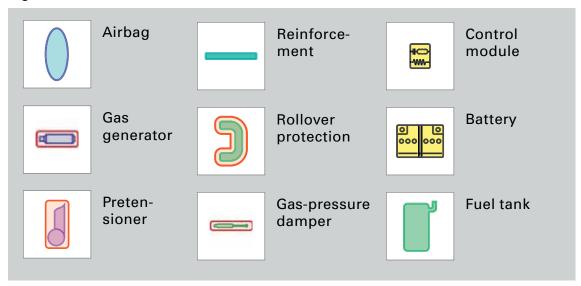






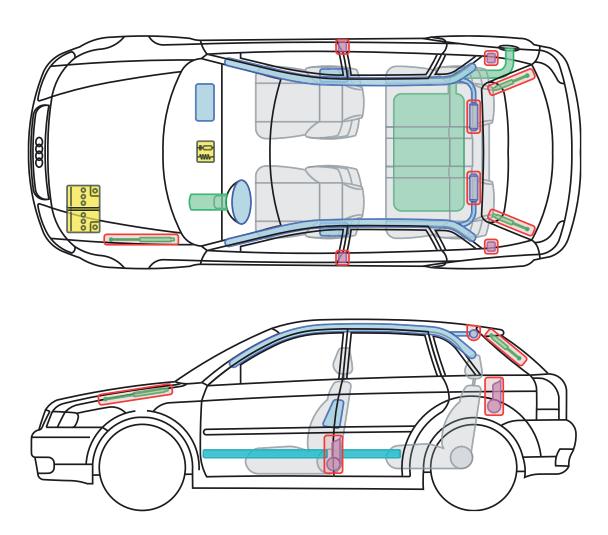


# Legend

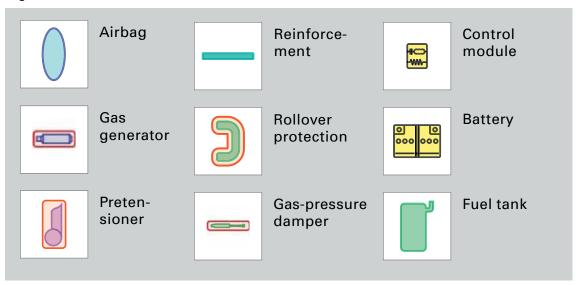






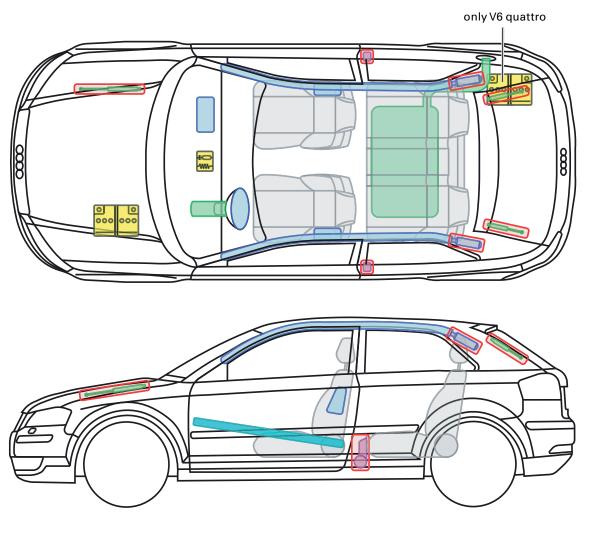



# Legend

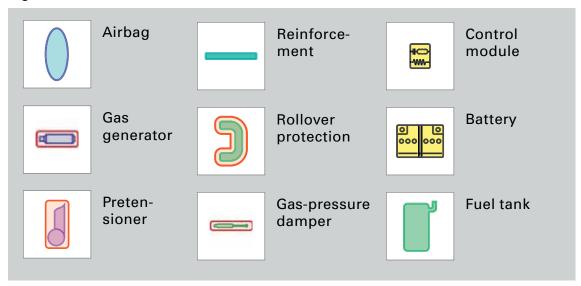






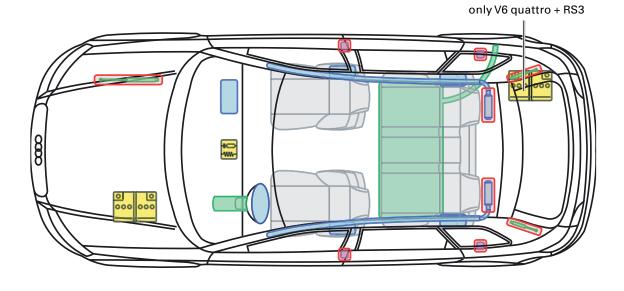

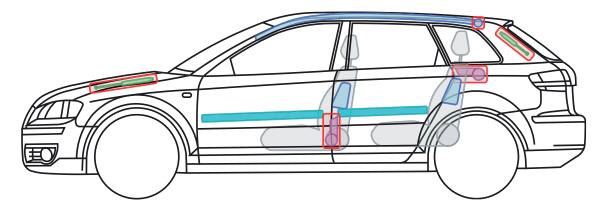


#### Legend

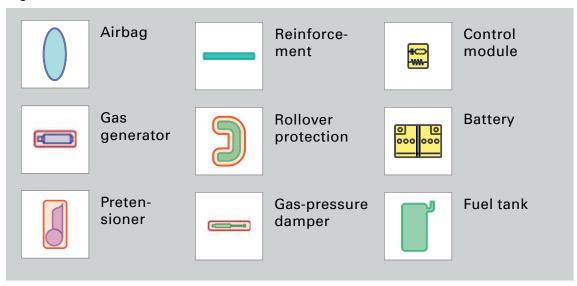






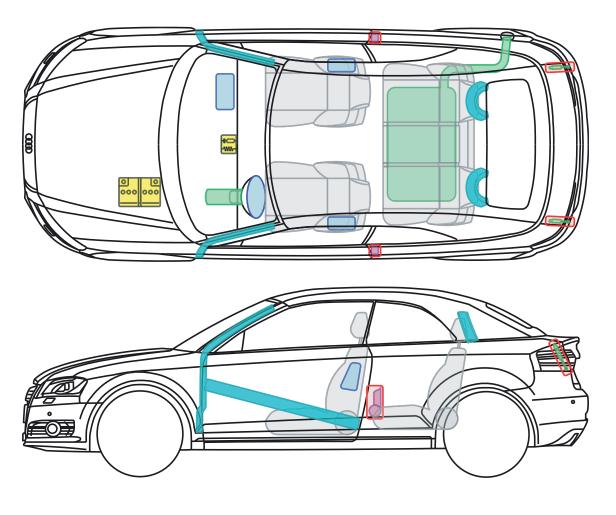


# Legend

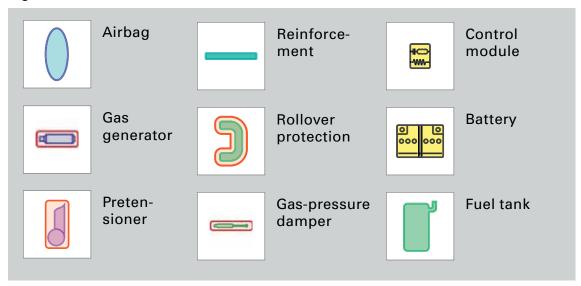






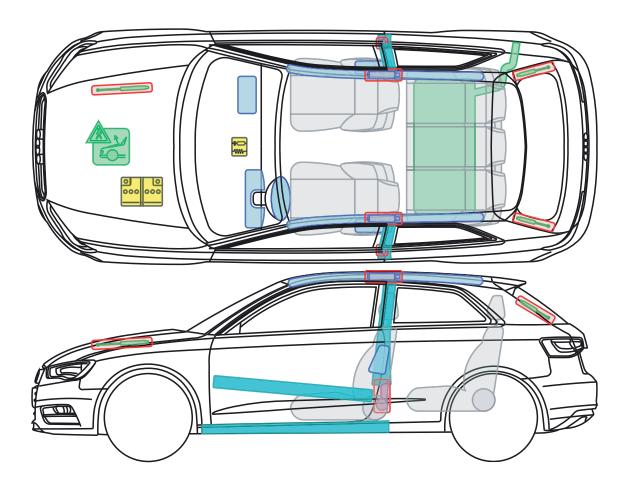


# Legend

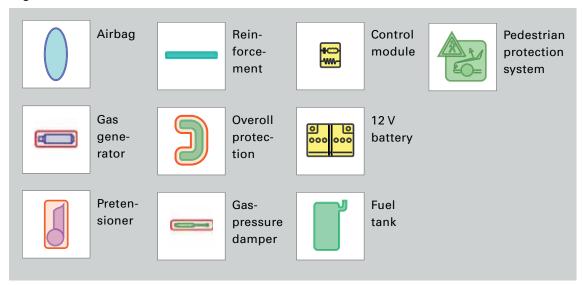






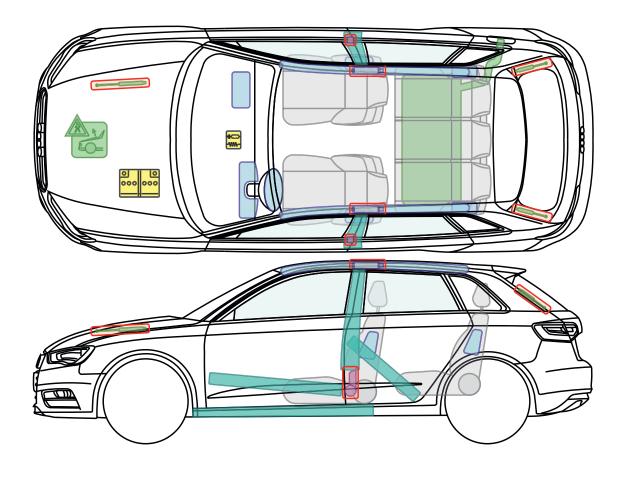


# Legend

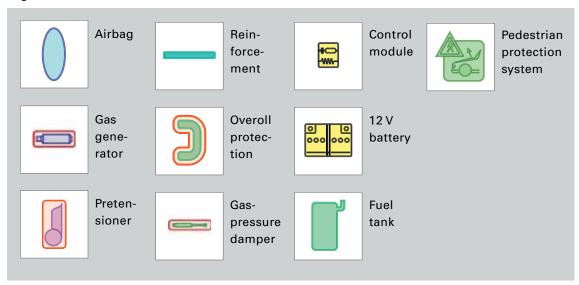






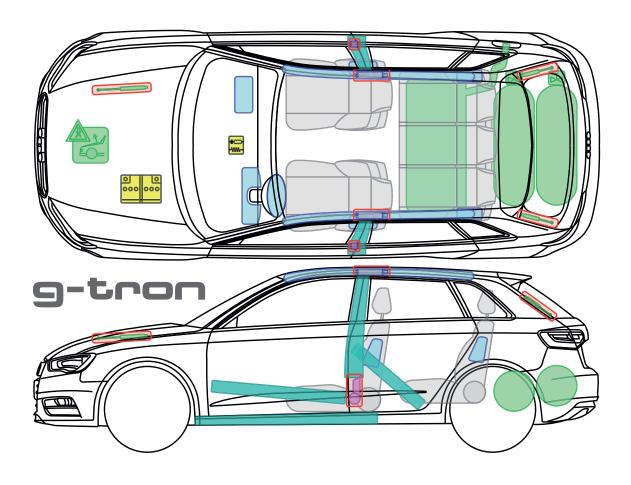

# Legend

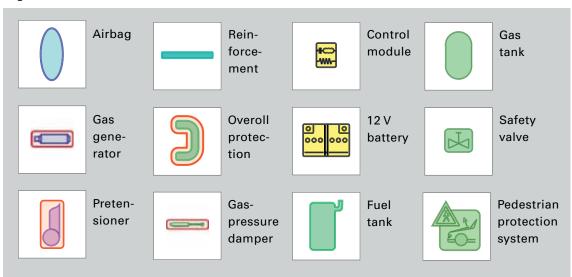





# Audi A3 Sportback g-tron

from 2013

#### Shut off gas tank manually


(e.g. in the case of smell of gas or leaking natural gas)

#### 1. Access to natural gas tanks




- Gas tanks are accessible from underbody.
- Gas tanks are protected by a plastic cover. In order to access the gas tanks, the cover needs to be removed without damaging the components of the gas system located below.

#### 2. Locate safety valves

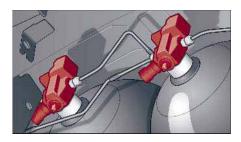

► Each gas tank is equipped with its individual cylinder valve and manual stopcock.


# 3. Switch off gas tank manually

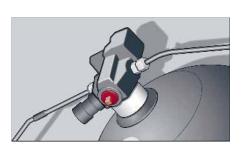


- If required, each fuel tank must allow separate shut-off
- ▶ By means of a 5 mm open-end wrench or ring spanner the manual shut-off valve may be shut off by means of turning the square clockwise until reaching the stop of the valve.





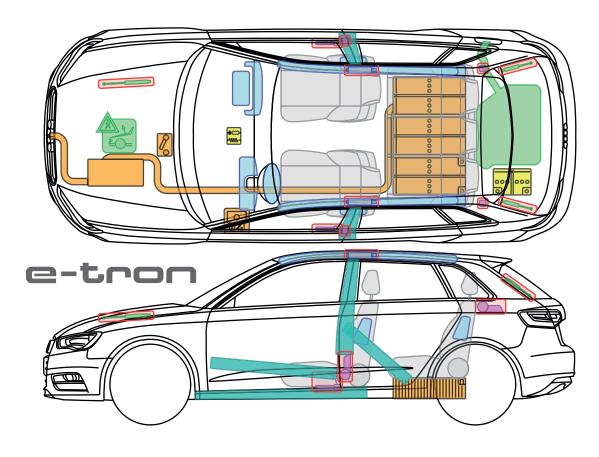

# Legend

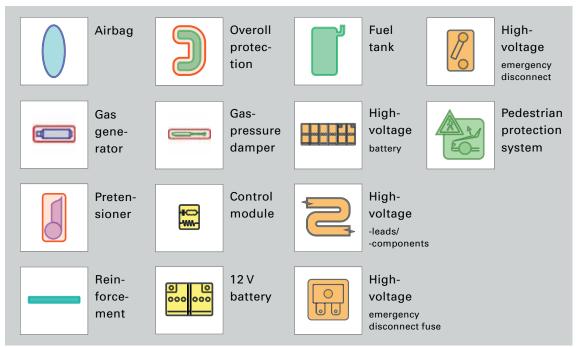





Audi A3 Sportback e-tron

from 2014

#### Characteristic features

The A3 e-tron can be identified by the e-tron logo, the orange cables (e. g. in engine compartment) and the charging socket.









#### Vehicle immobilization

- 1. Gear lever in position park "P"
- 2. Apply parking brake





# Switch off ignition

Press START-ENGINE-STOP button without depressing brake pedal.





Warning: When pressing the START-ENGINE-STOP button and depressing the brake pedal at the same time, the engine will start!





Audi A3 Sportback e-tron


from 2014


# Deactivation of High Voltage System

# Alternative 1 - Engine compartment accessible

- 1. Localize emergency disconnect
- 2. Open safety disconnect



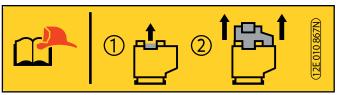

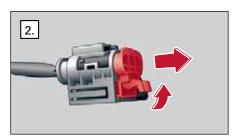





# Alternative 2 - Emergency disconnect fuse in passenger compartment


- 1. Identify emergency fuse
- 2. Disconnect emergency fuse



Fuse box – **left-hand drive** (steering wheel left)

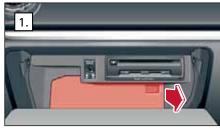

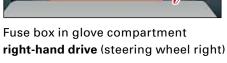

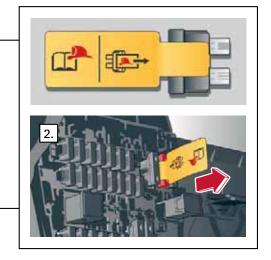



Audi A3 Sportback e-tron

from 2014

# Disconnect 12 V battery

The 12 V battery is located in the luggage compartment below the luggage compartment floor. The cables of both terminals are fed out directly through the plastic cover.





# Disconnect charging cable

Vehicle connected to charging station:

- 1. Unlock vehicle via remote control or central locking switch
- 2. Disconnect charging cable


If required, follow further steps of this rescue data sheet










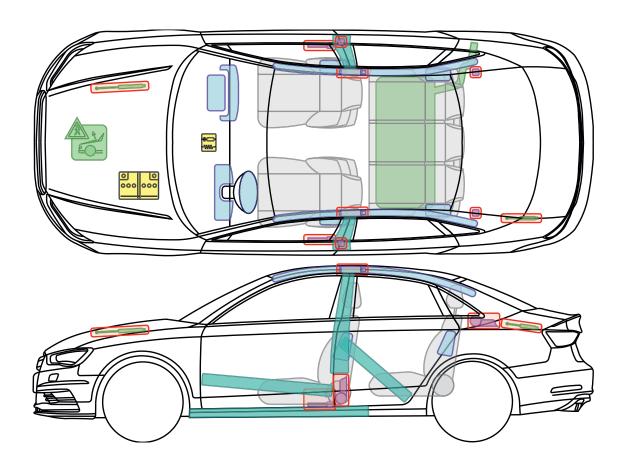


# Legend

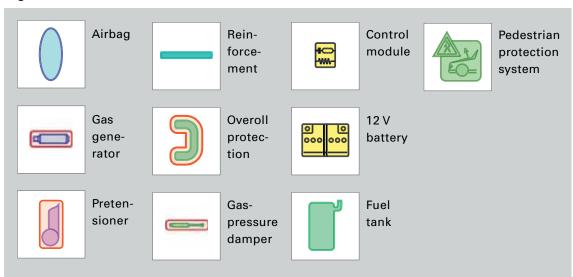






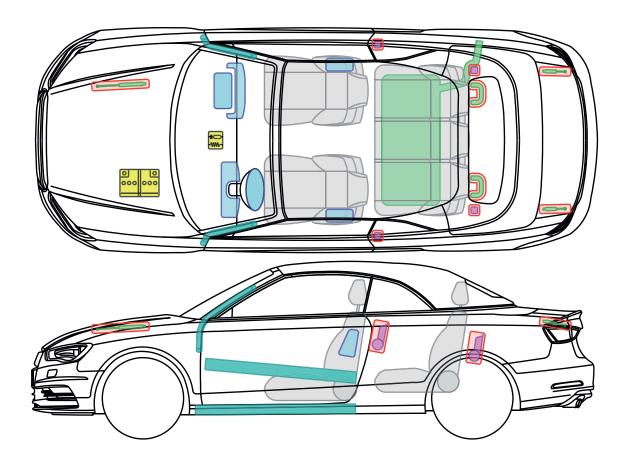


# Legend

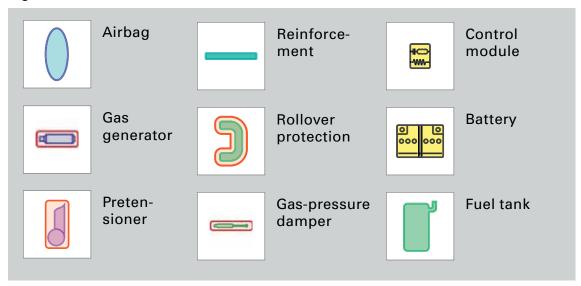






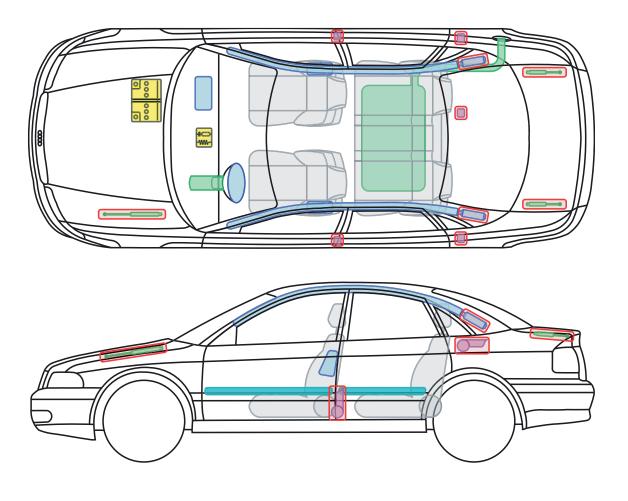


# Legend

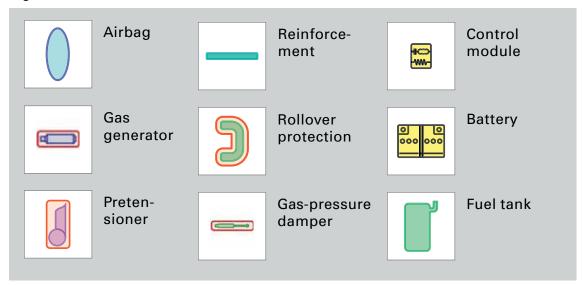







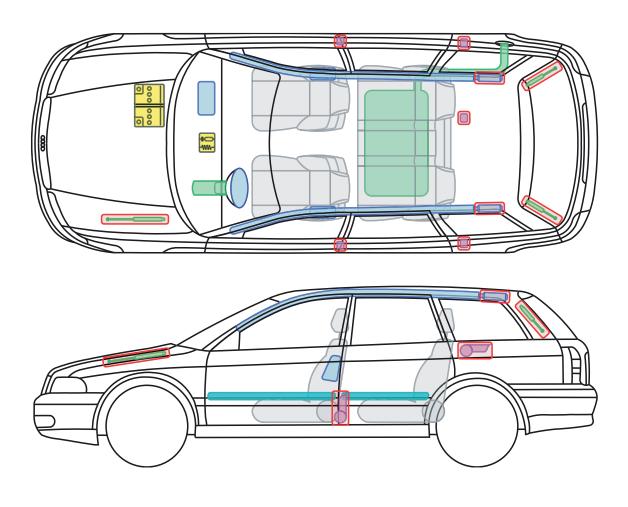


# Legend

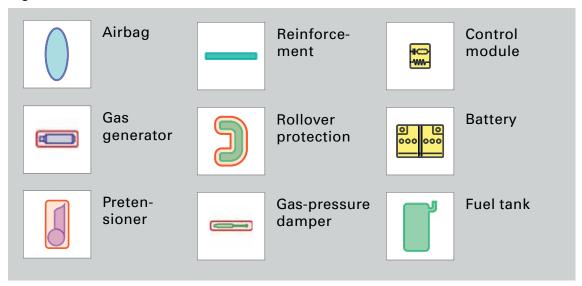



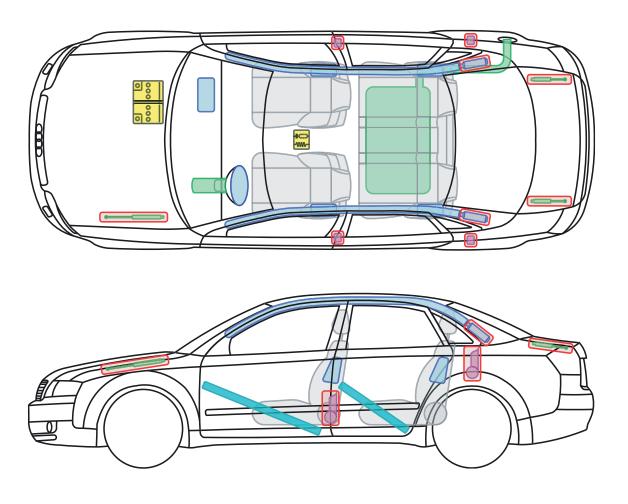


# Legend

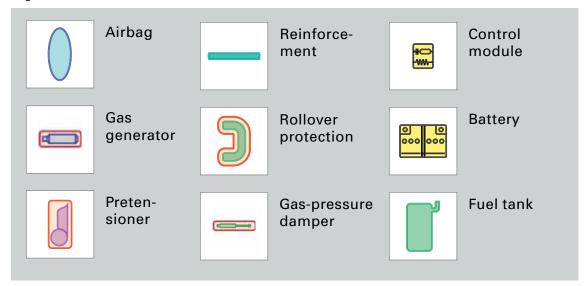






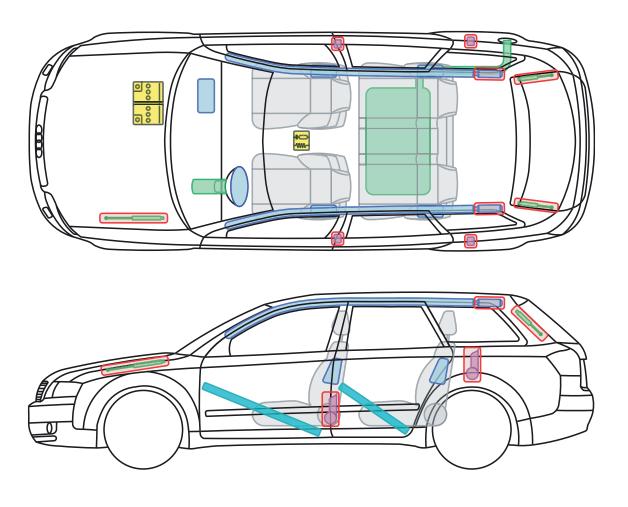



# Legend

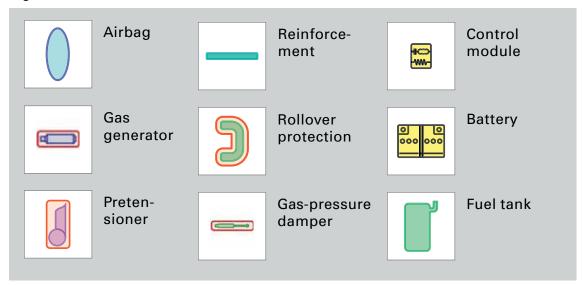






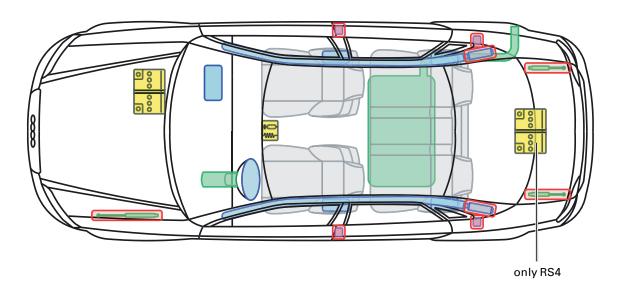

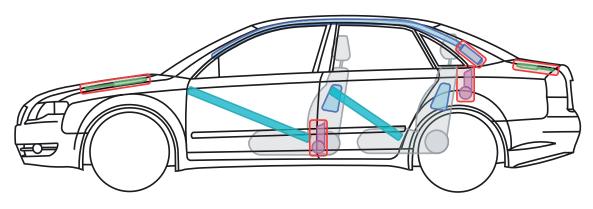



# Legend

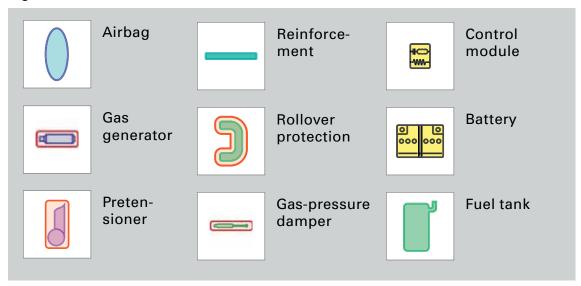






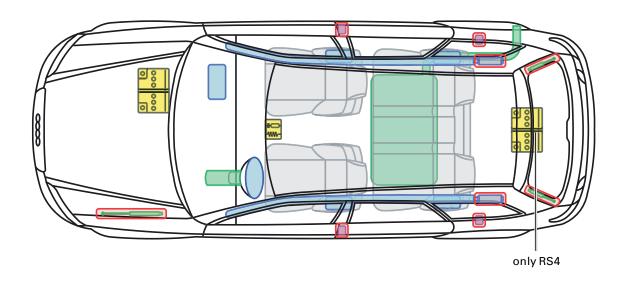

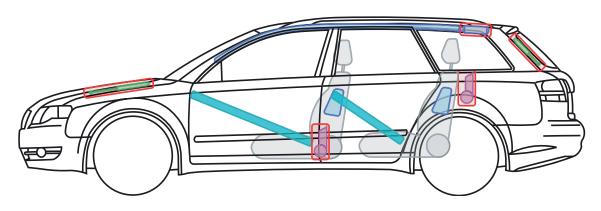


# Legend

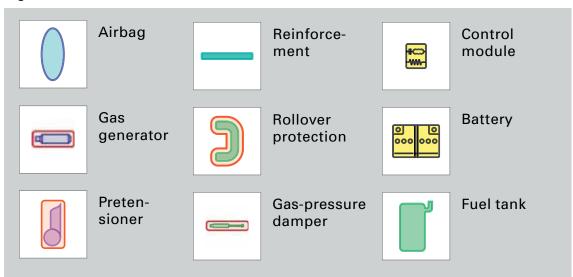






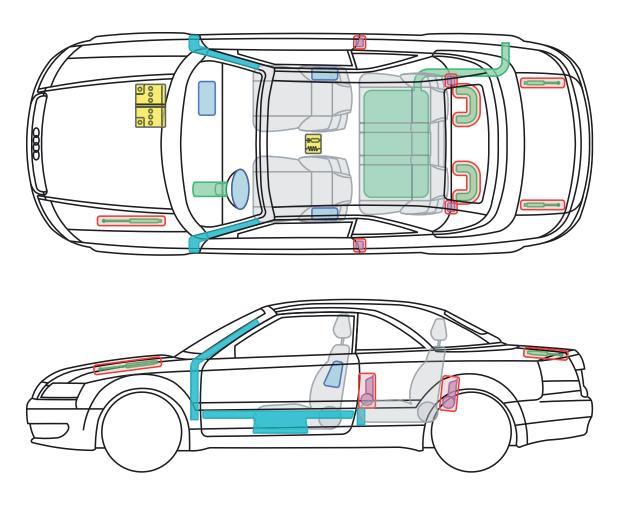


# Legend

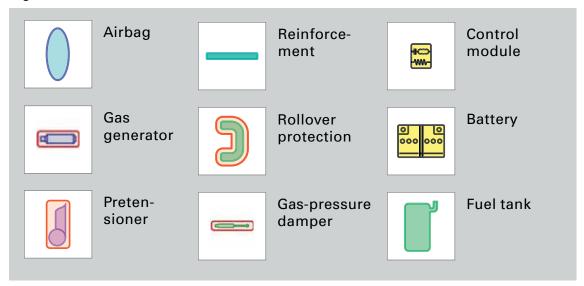






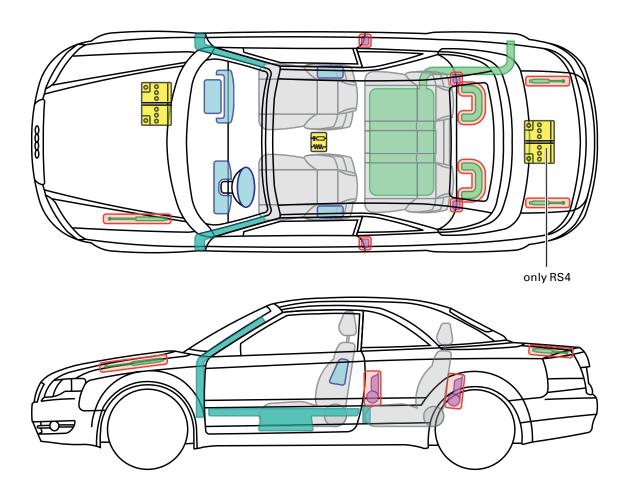


# Legend

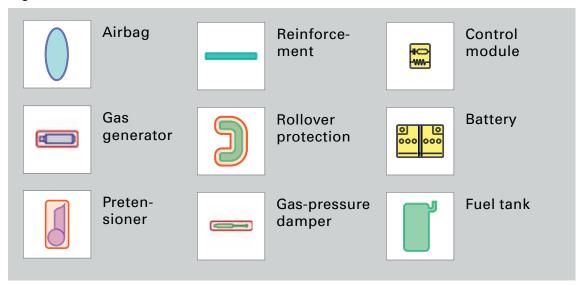






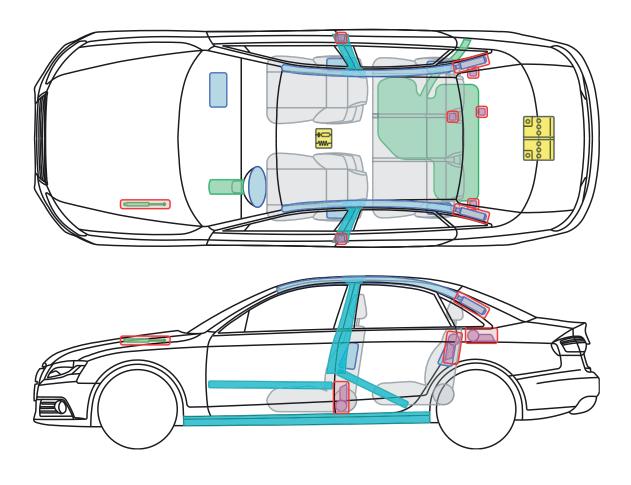


# Legend

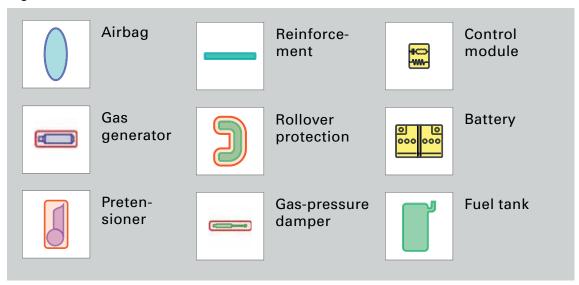






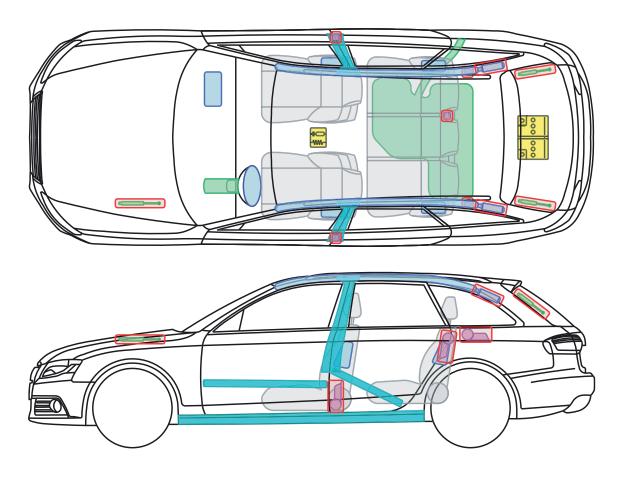


# Legend

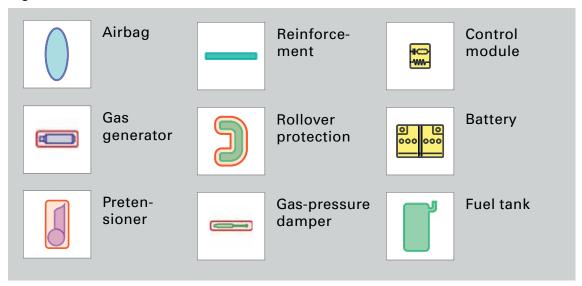






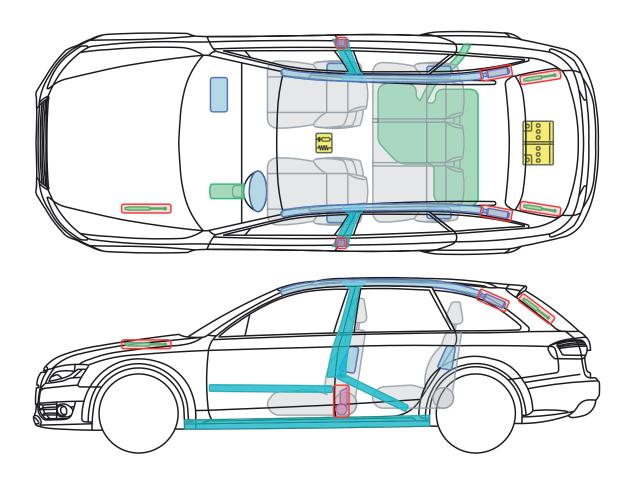


# Legend

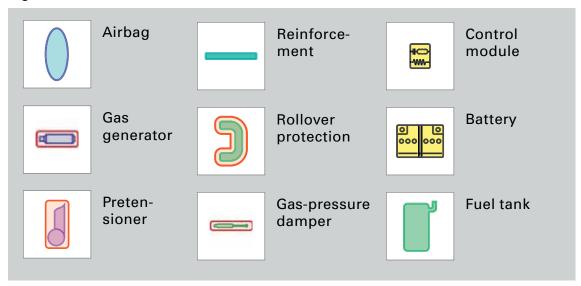






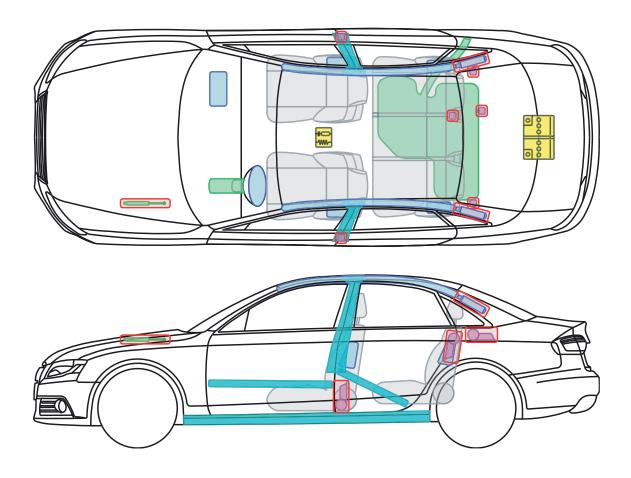


# Legend

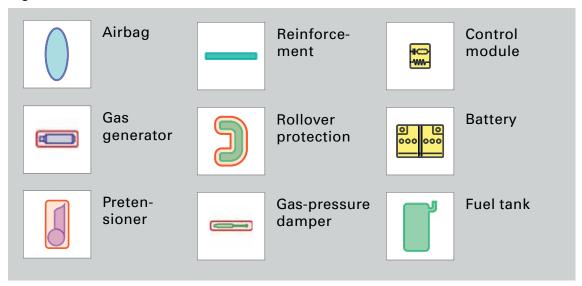






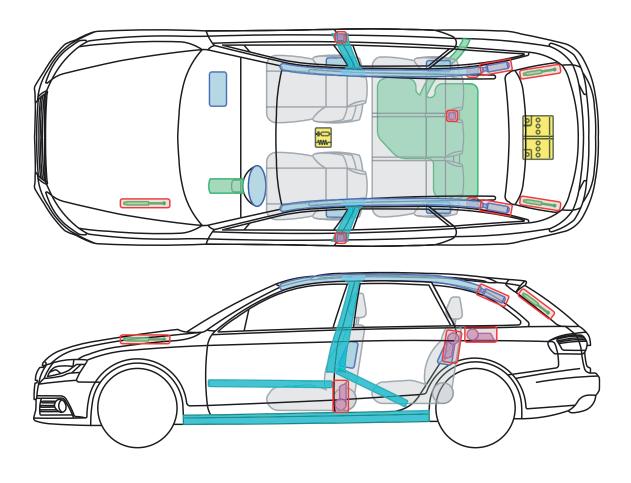


# Legend

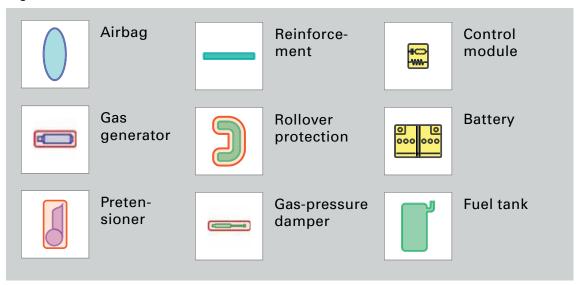






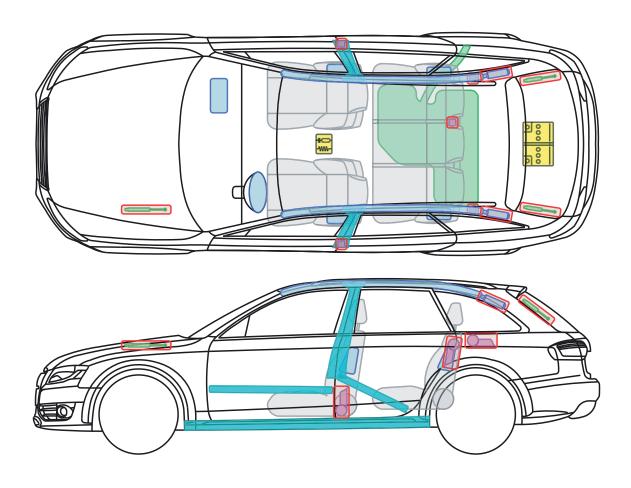


# Legend

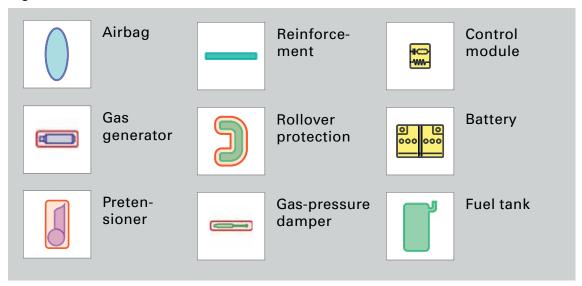






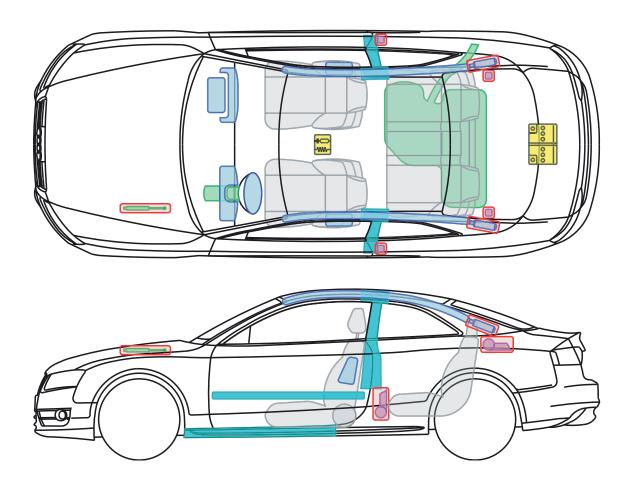


# Legend

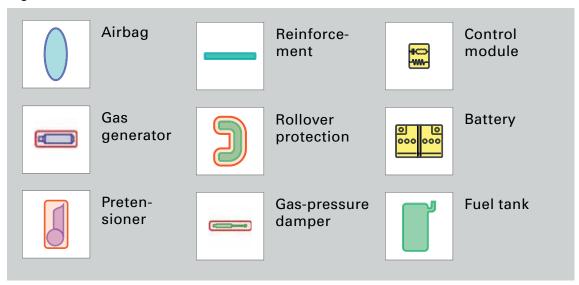






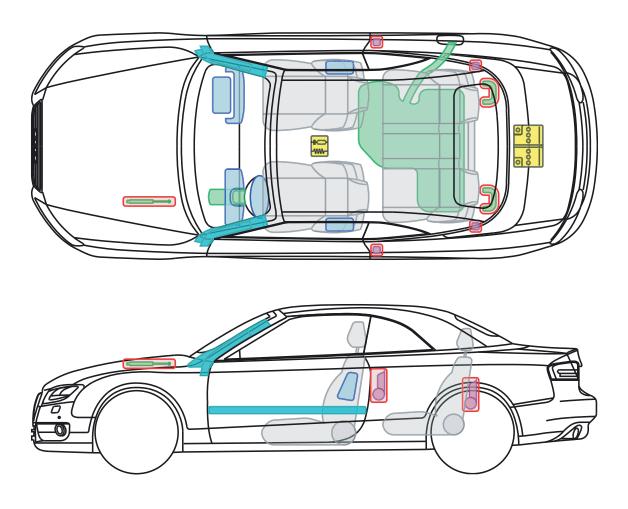


# Legend

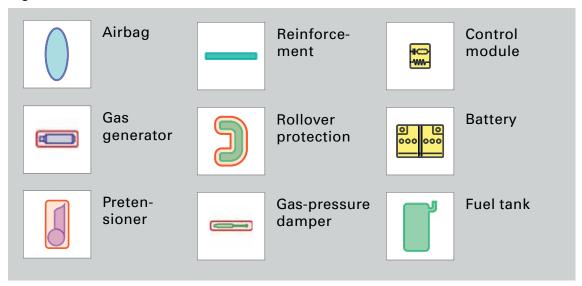






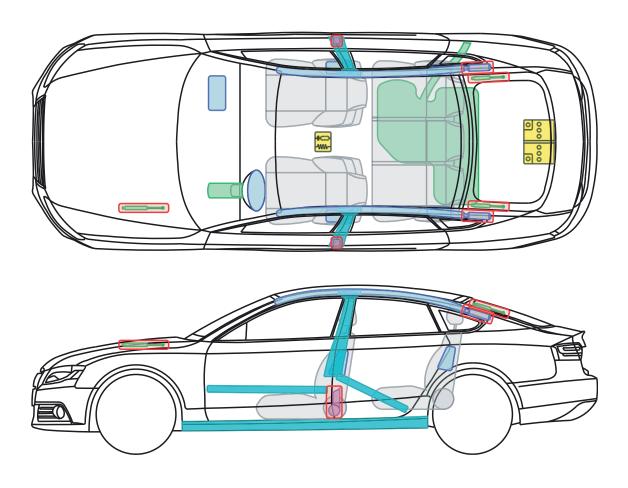


# Legend

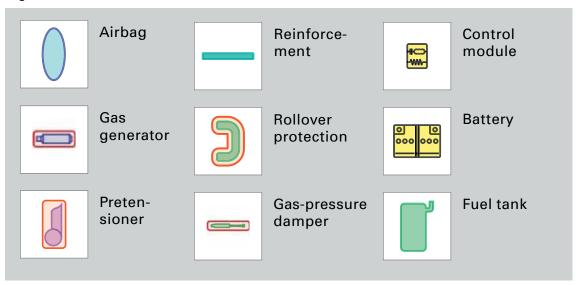






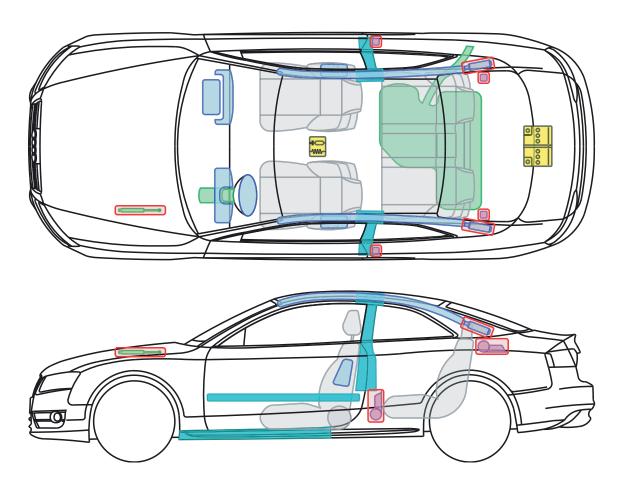


# Legend

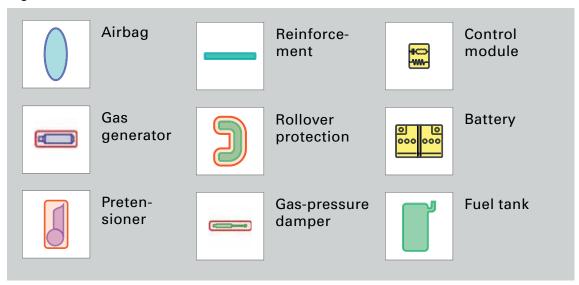






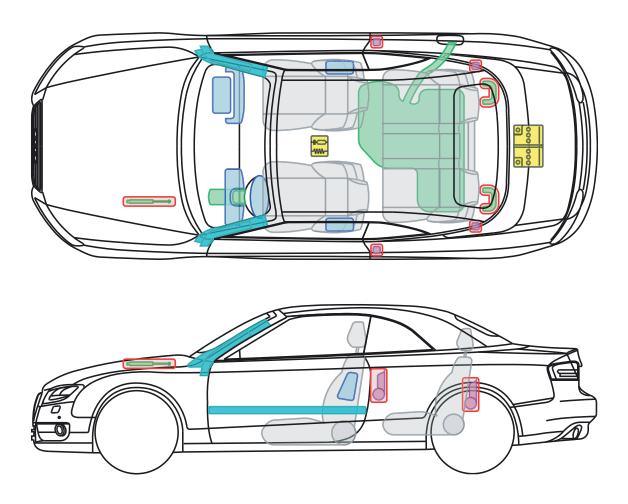


# Legend

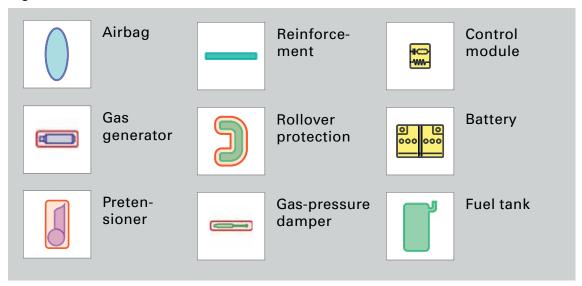






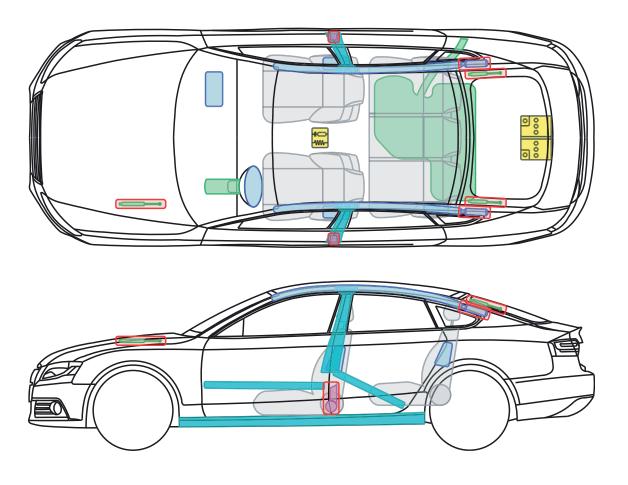


# Legend

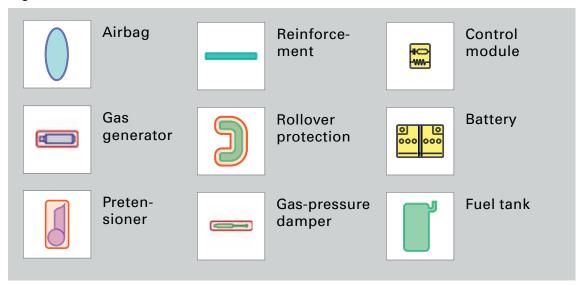






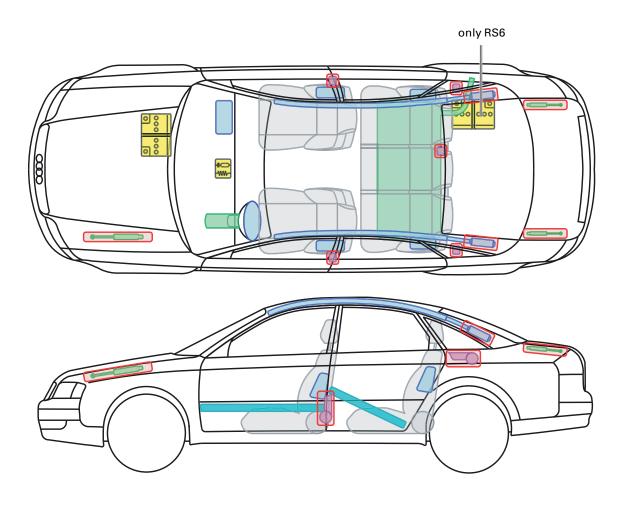

# Legend

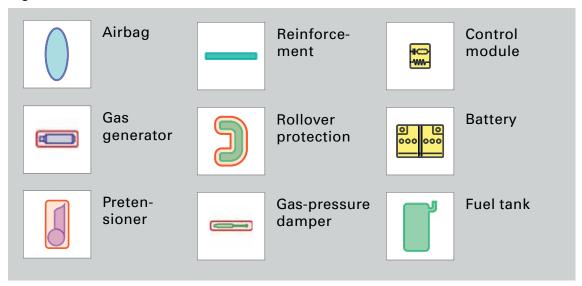









# Audi A6 / S6 / RS6 Avant

1998 - 2004

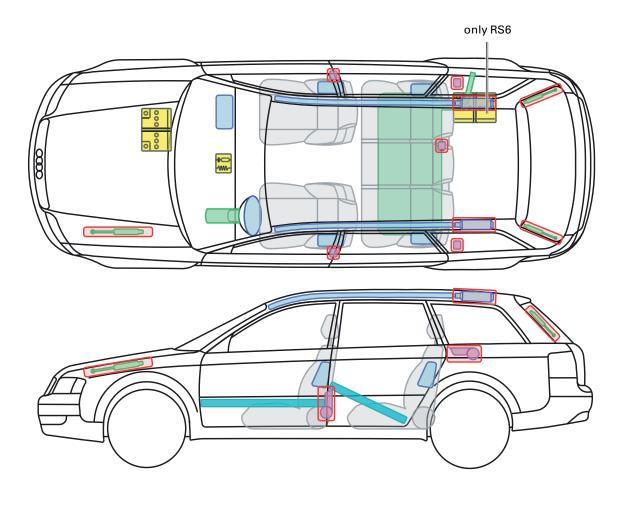


# Legend

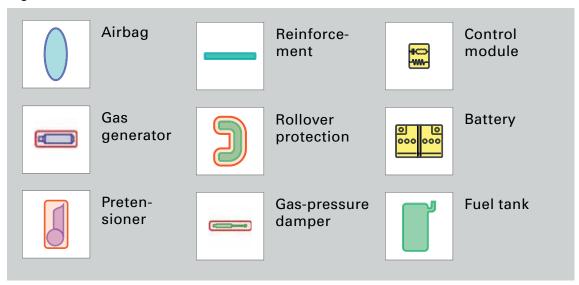






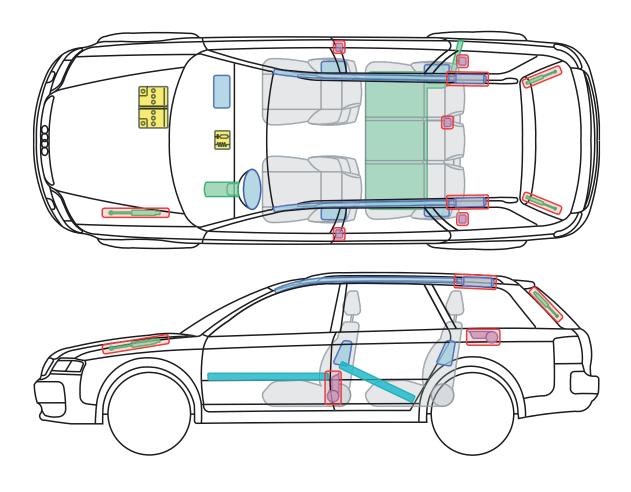


# Legend

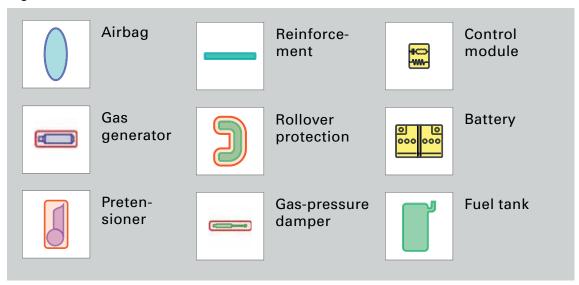






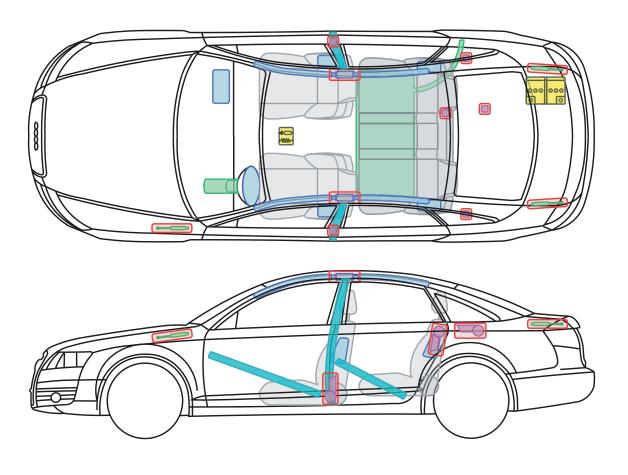


# Legend

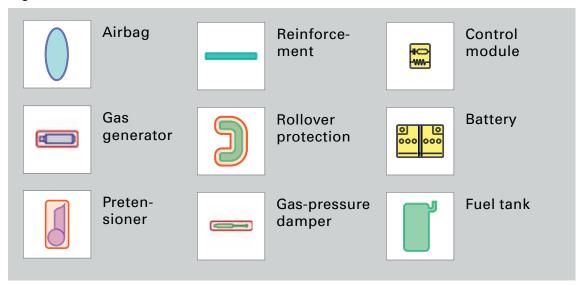






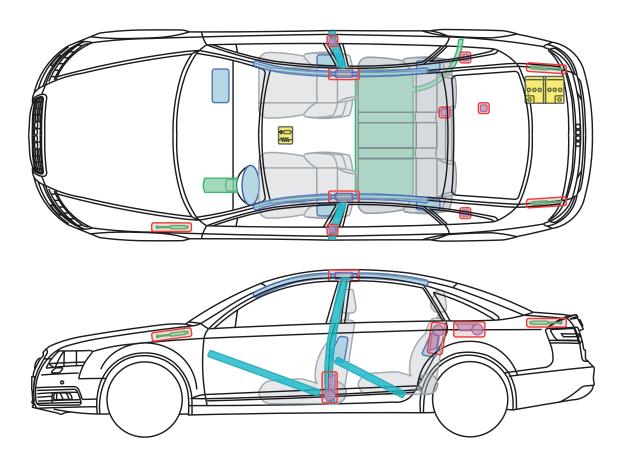


# Legend

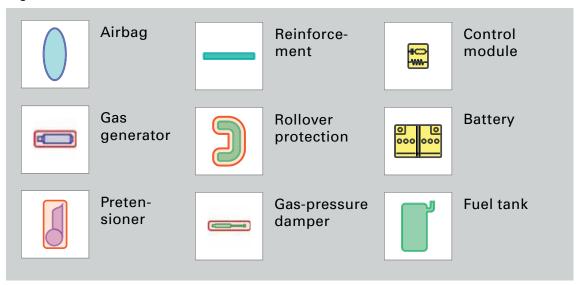






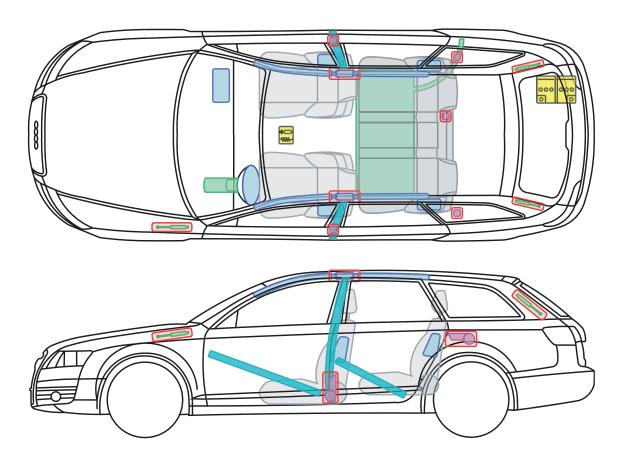


# Legend

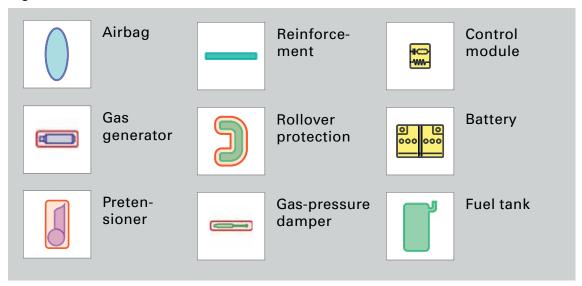






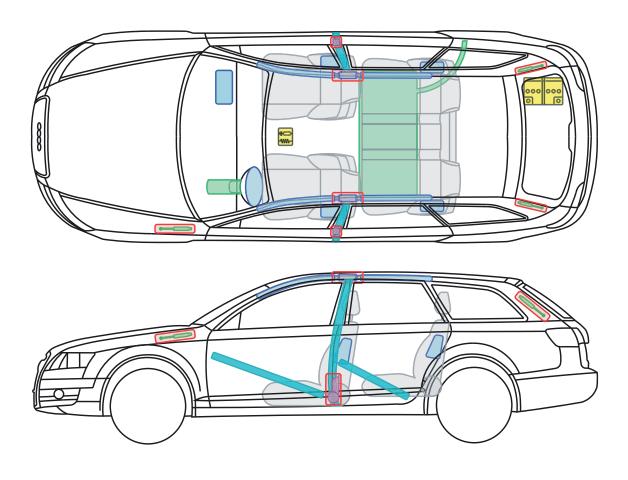


# Legend

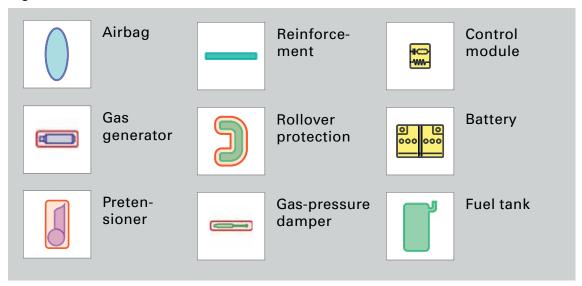






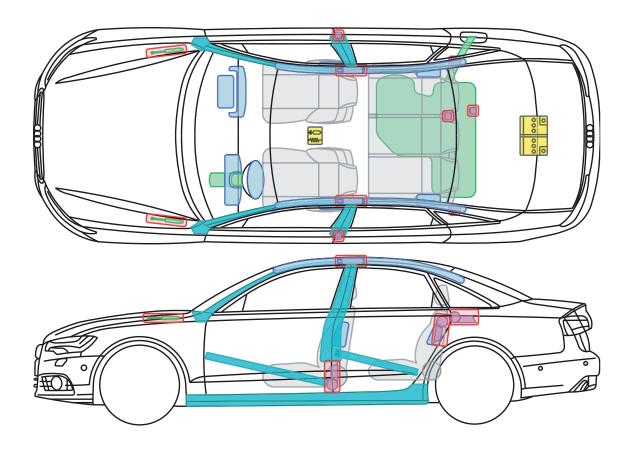


# Legend

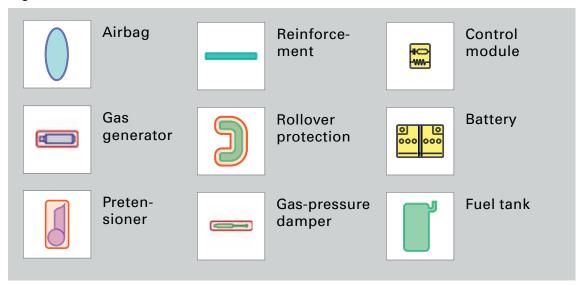






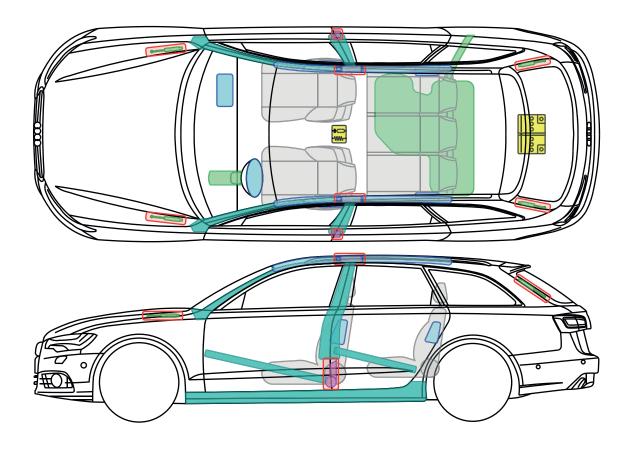


# Legend

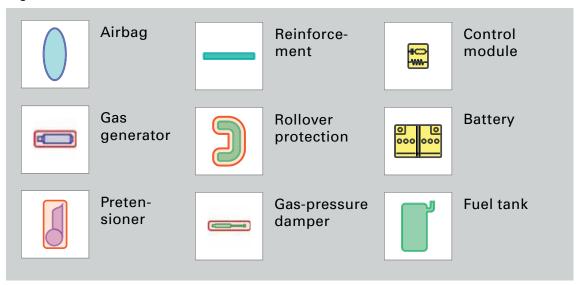






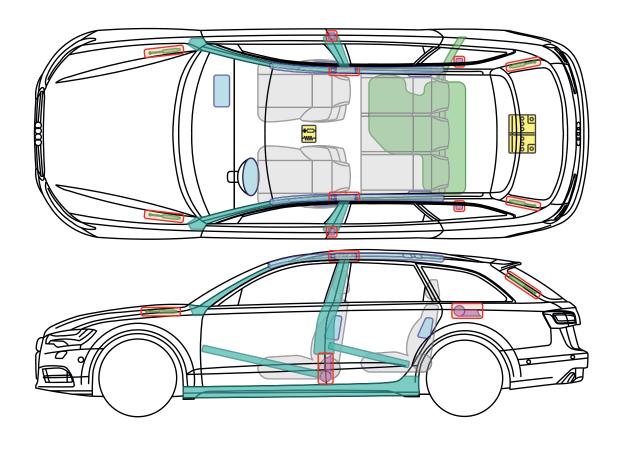


# Legend

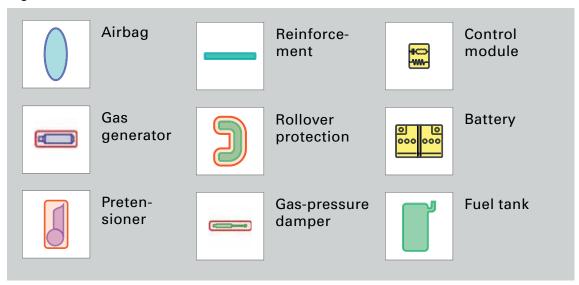






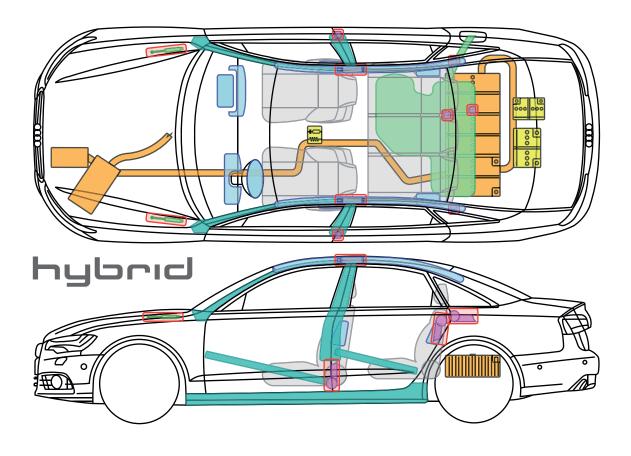

# Legend

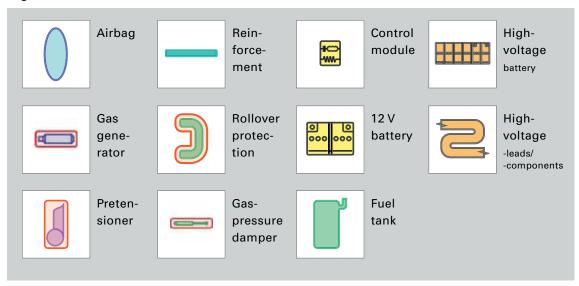





#### Identifying feature

The Audi A6 hybrid can be identified by means of the "hybrid" logo and the orange cables in the engine compartment.



# Hints



In the case of accidents in which the airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags

- ► Place Vehicle in Park and set parking brake
- Switch off the ignition
- ▶ Disconnect the negative terminals of the 12V battery



#### The electric motor is silent!



It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on "OFF" (for example on the "READY position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

# Switch off the ignition



# With the ignition switched on:

Press START ENGINE STOP button without depressing brake pedal.



Risk of Injury: By pressing the START ENINGE STOP button with depressing brake pedal, the engine starts!






#### Disconnect the negative terminals of the 12 V batteries

#### Option A:

Release the luggage compartment floor by means of the screws indicated by the arrows (screw-driver in the car tool kit) Disconnect the ground cables from both 12V batteries (picture on right)

#### Option B:

Lever up the luggage compartment floor by inserting a crowbar at the point indicated. Lift up the luggage compartment floor. Disconnect the ground cables from both 12V batteries (picture on right)

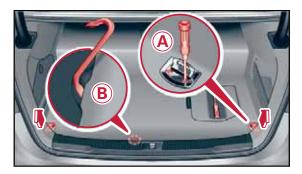



# Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the The high-voltage battery is located under the luggage compartment floor.

It is a lithium-ion battery.


Identification of the remaining high-voltage components






All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.



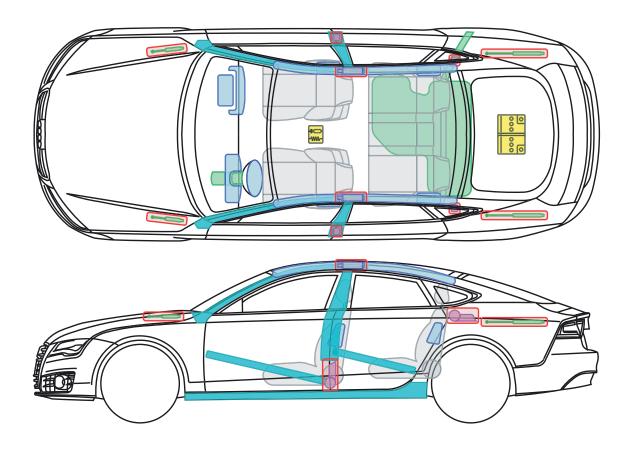


#### Legend

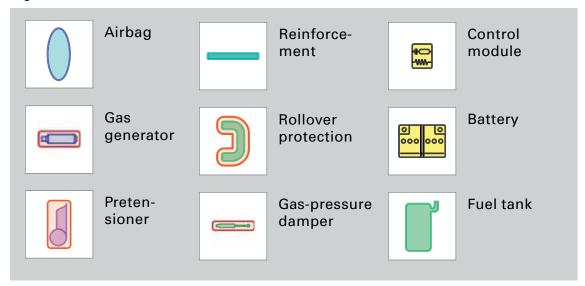






1994 – 2002

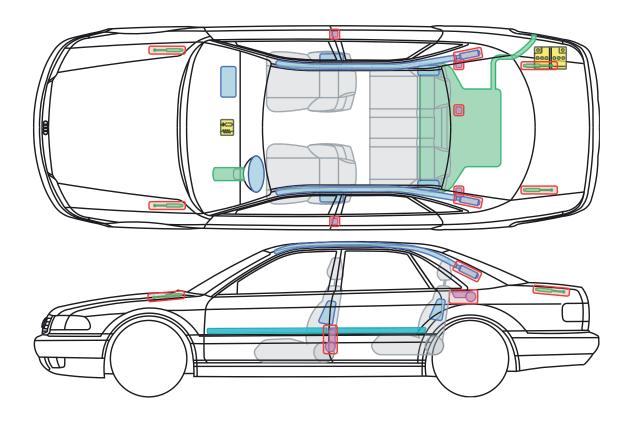


# Legend

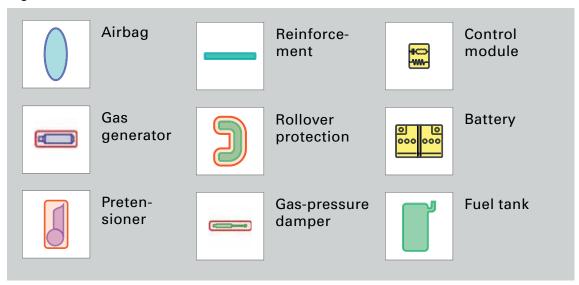







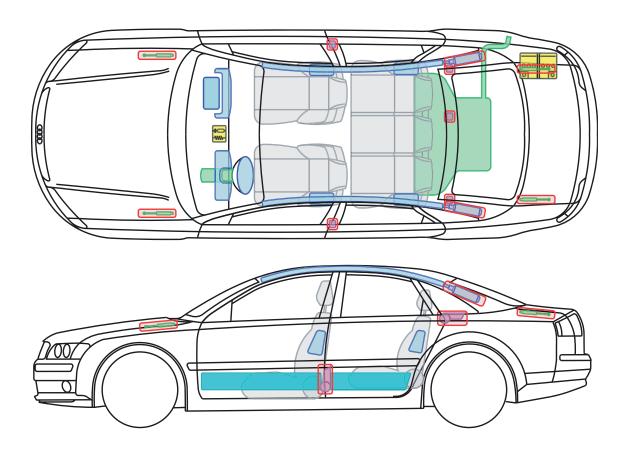


# Legend

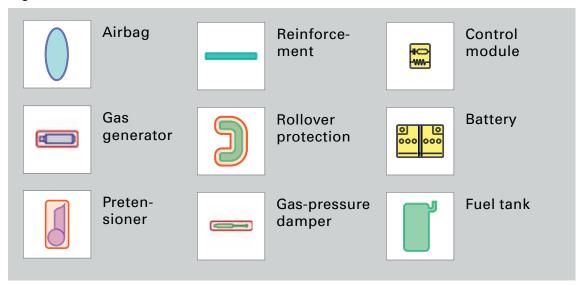



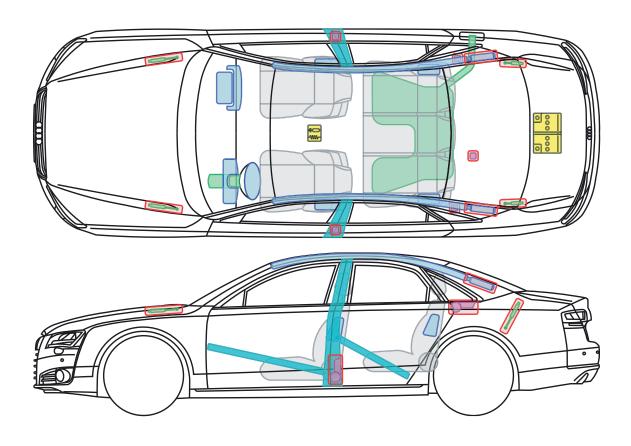


# Legend

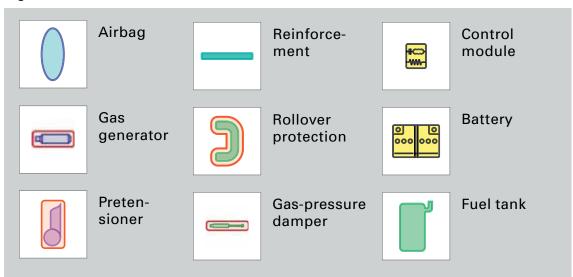






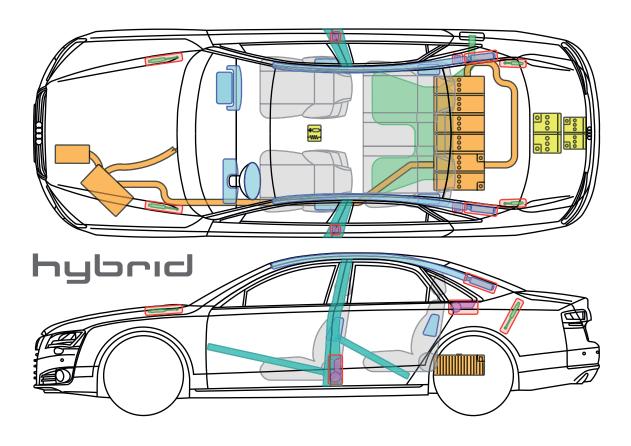

# Legend

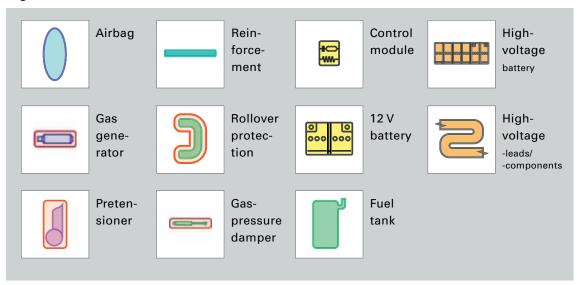





#### Identifying feature

The Audi A8 hybrid can be identified by means of the "hybrid" logo and the orange cables in the engine compartment.



# Hints



In the case of accidents in which the airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags

- ▶ Place Vehicle in Park and set parking brake
- Switch off the ignition
- ▶ Disconnect the negative terminals of the 12V battery



#### The electric motor is silent!



It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on "OFF" (for example on the "READY position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

# Switch off the ignition



# With the ignition switched on:

Press START ENGINE STOP button without depressing brake pedal.



Risk of Injury: By pressing the START ENINGE STOP button with depressing brake pedal, the engine starts!





## Disconnect the negative terminals of the 12 V batteries

Lever up the luggage compartment floor. Lift up the tool box element. Disconnect the ground cables from both 12 V batteries (picture on right).





## Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the The high-voltage battery is located under the luggage compartment floor.

It is a lithium-ion battery.

Identification of the remaining high-voltage components






All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.






Audi Q3 / RS Q3

from 2011

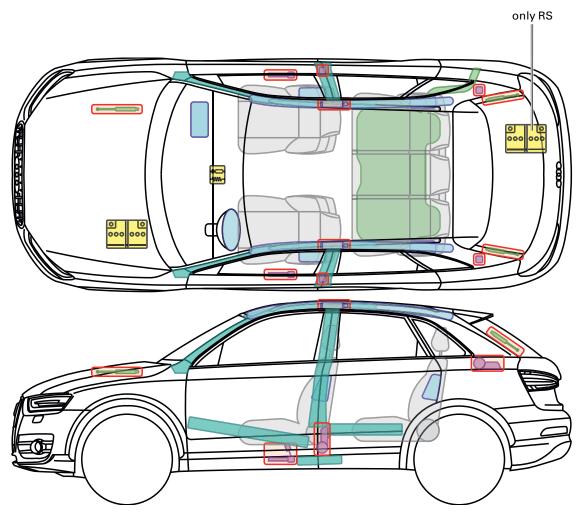

## Legend

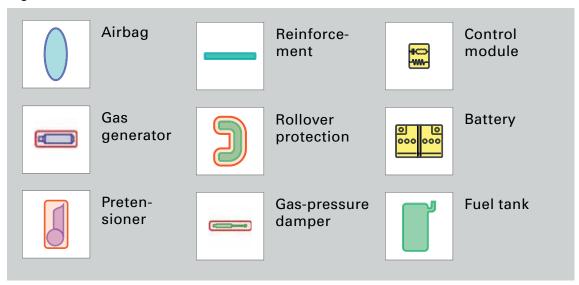







# Audi Q5 / SQ5

from 2008

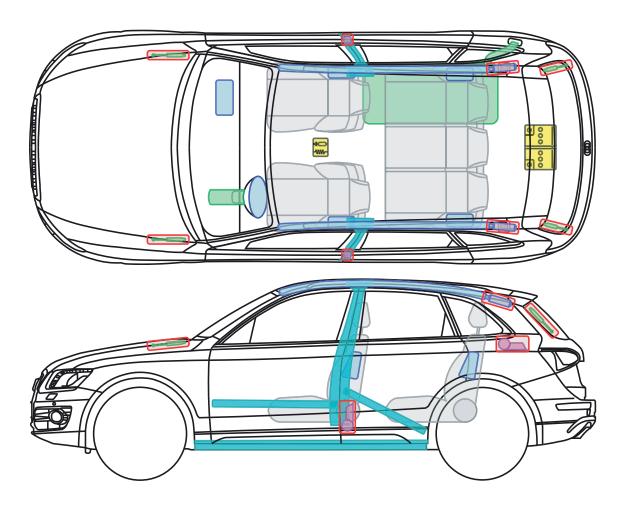


## Legend

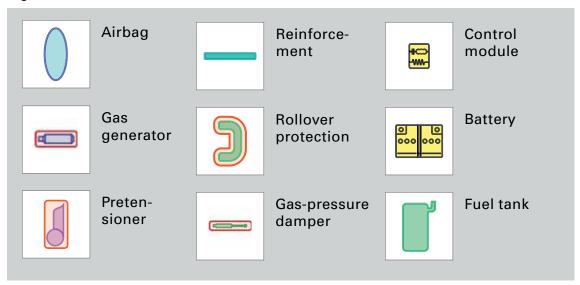






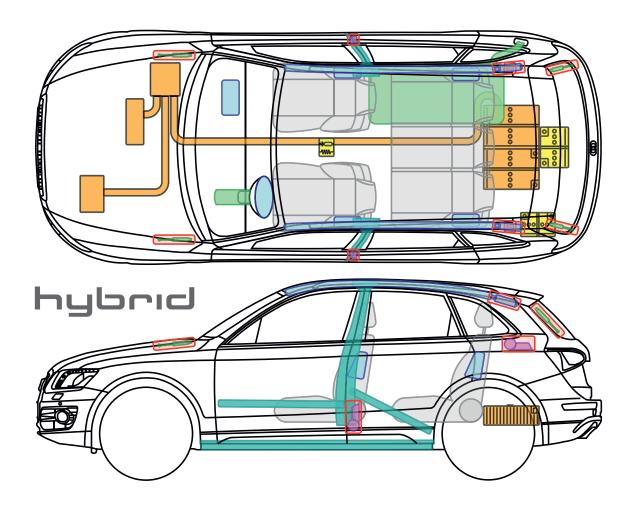

## Legend

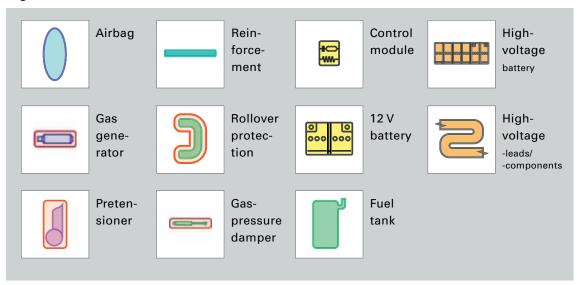





Audi Q5 hybrid quattro

from 2011

## Identifying feature

The Audi Q5 hybrid quattro can be identified by means of the "hybrid" logo.



#### Hints



In the case of accidents in which the airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags

- ► Place Vehicle in Park and set parking brake
- Switch off the ignition
- Disconnect the negative terminals of the 12V battery



## The electric motor is silent!



It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on "OFF" (for example on the "READY position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

## Switch off the ignition



With the ignition switched on and the key in the ignition:
Switch off the ignition by pressing the key into the ignition lock
without depressing brake pedal. Pull out the key.



With the ignition switched on and the key not in the ignition (possible with the convenience key):

Press START ENGINE STOP button **without** depressing brake pedal. If possible, take the convenience key outside the transmission range of the vehicle (5 meter).



Risk of Injury: By pressing the key/the START ENINGE STOP button with depressing brake pedal, the engine starts!






## Disconnect the negative terminals of the 12V batteries

#### Option A:

Release the luggage compartment floor by means of the screws indicated by the arrows (screw-driver in the car tool kit) Disconnect the ground cables from both 12V batteries (picture on right)

#### Option B:

Lever up the luggage compartment floor by inserting a crowbar at the points indicated. Lift up the luggage compartment floor. Disconnect the ground cables from both 12V batteries (picture on right)

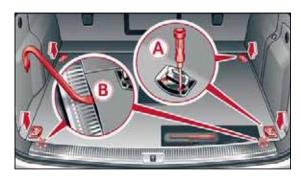



## Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the The high-voltage battery is located under the luggage compartment floor.

It is a lithium-ion battery.

Identification of the remaining high-voltage components







All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.





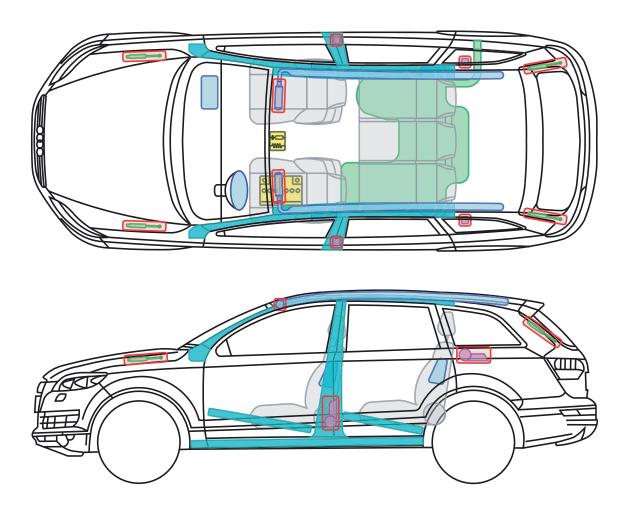


## Legend

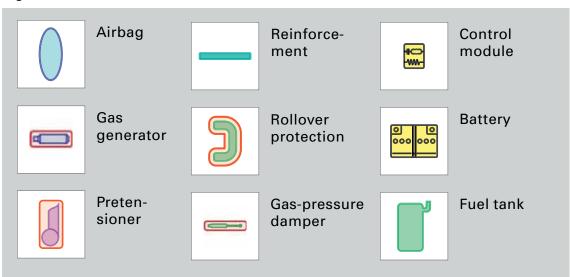







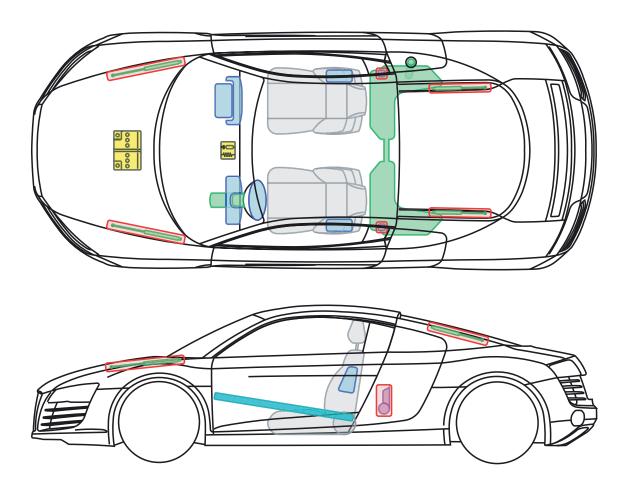


## Legend

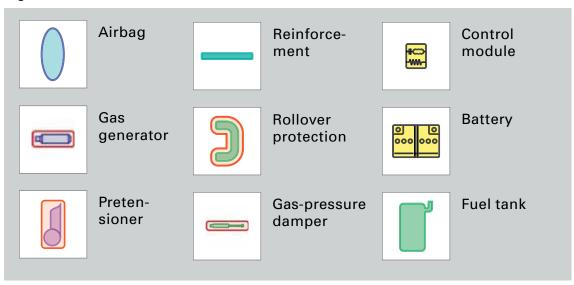



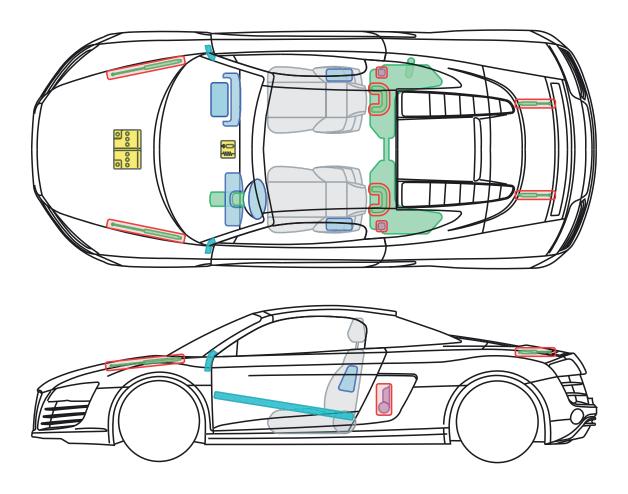


## Legend

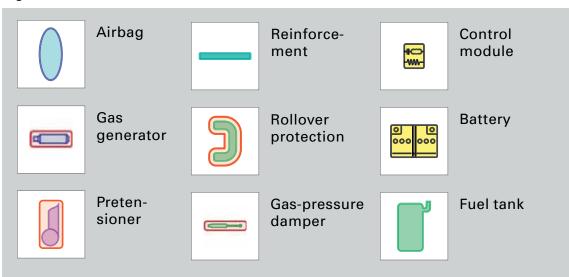






1998 - 2006

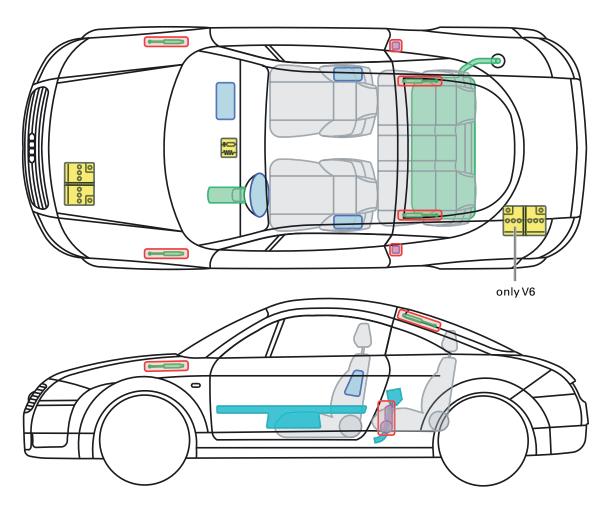


## Legend

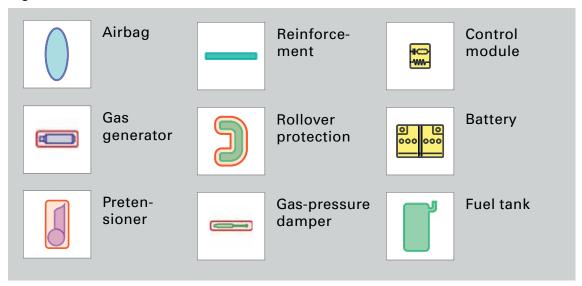






1999 - 2006

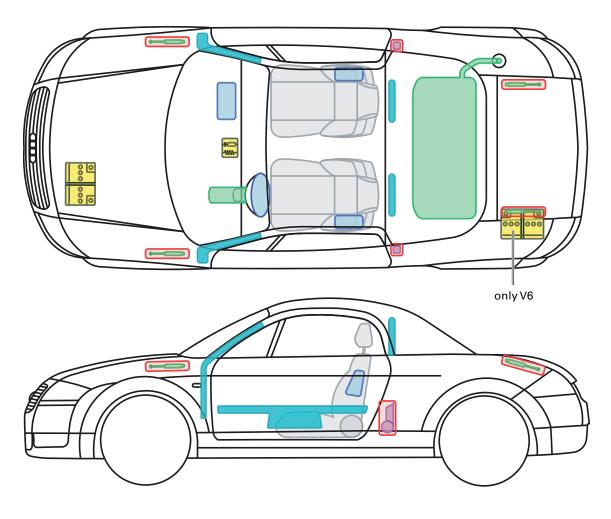

## Legend

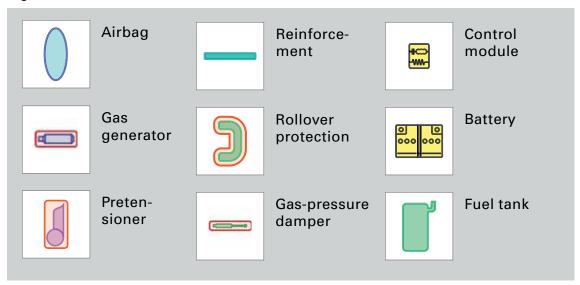










## Audi TT / TTS / TTRS Coupé

2006 - 2014

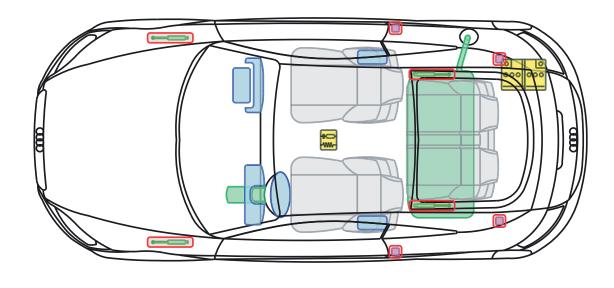

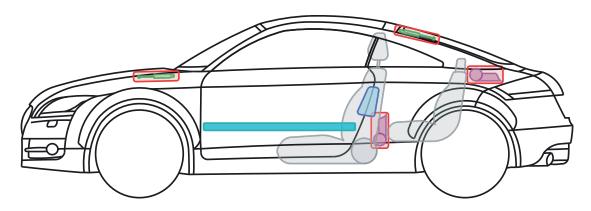


#### Legend

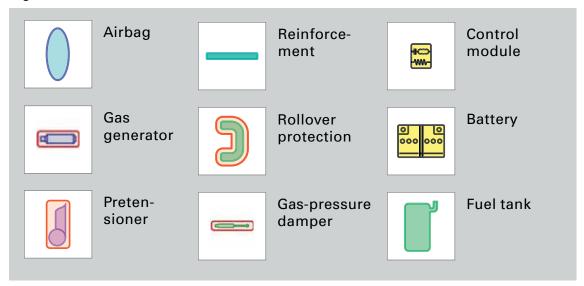






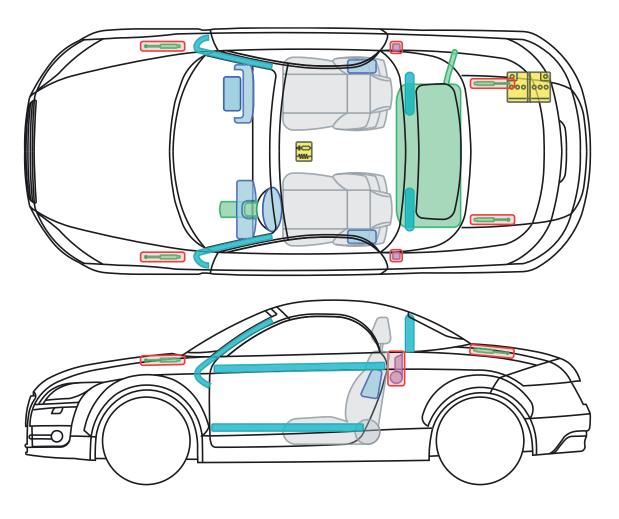


## Legend

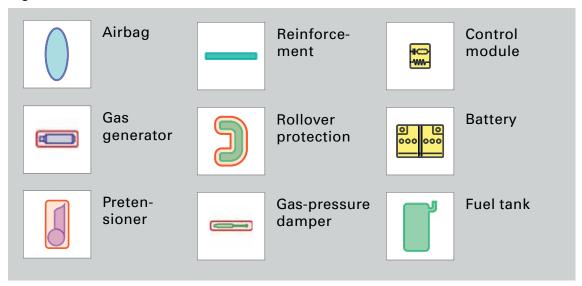





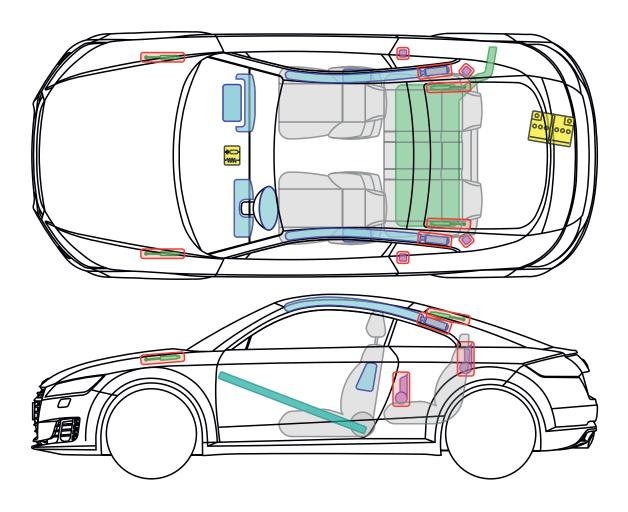

## Legend

